
Zero Differential Pressure Type Pilot Operated 2 Port Solenoid Valve

VXZ Series







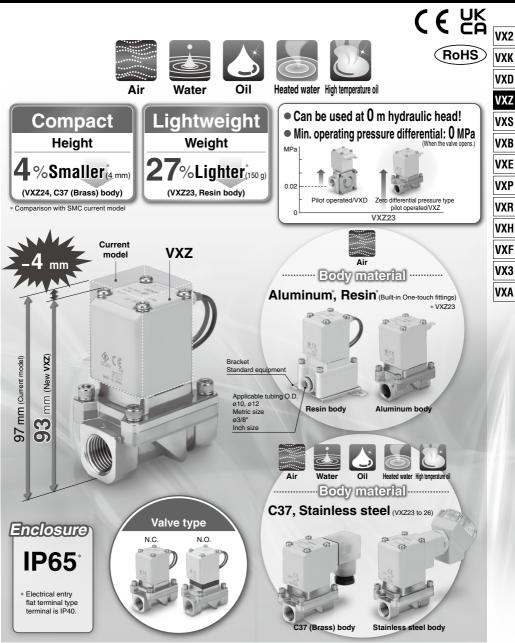






Enclosure IP65

Flame resistance **UL94V-0** conformed Flame resistant mold coil material

Piping variations Thread piping, One-touch fitting

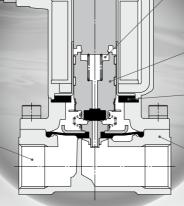

Clearance

By providing a bumper and clearance, we reduced the collision sound of the core when ON (when the valve is open). Because of the clearance, when using highly viscous fluids such as oil, the armature does not get stuck and the responsiveness when OFF (when the valve is closed) is improved.

Improved armature durability

Low-noise construction

Metal noise reduced by the rubber bumper

Body material

Aluminum, Resin Air (VXZ2A)

C37, Stainless steel

Water/ Oil/Air/ Heated water/

Built-in full-wave rectifier type (AC specification)

- Improved durability Service life is extended by the special construction. (compared with current AC specification)
- Reduced buzz noise Rectified to DC by the full-wave rectifier, resulting in a buzz noise reduction.
- Improved OFF response Specially constructed to improve the OFF response when operated with a higher viscosity fluid such as oil.
- Low-noise construction Specially constructed to reduce the metal noise during operation.





Variations

<Fluid>

Madal	Applicable fluid*				
Model	Air	Water	Oil	Heated water	(Figh temperature of
For Air VXZ2 P.176					
For Water VXZ2 2 P.179		•			
For Oil VXZ2 3 P.182		•	•		
For Heated water VXZ2 5 P.185	•	•		•	
For High temperature oil VXZ2 6 P.188		•	•		•

<body s<="" th=""><th>ize></th><th></th><th></th><th></th><th></th></body>	ize>				
Model	Body size	Orifice diameter mmø	Port size	Body material	Fluid
			1/4, 3/8	Aluminum	
VXZ2 ³	404	40	ø10, ø12, ø3/8"	Resin	Air
VXZ2Ā	10A	10	1/4 2/9	C37	
			1/4, 3/8	Stainless steel	
VXZ24	454	45	1/0	C37	Air Water
VAZZĖ	15A	15	1/2	Stainless steel	
VXZ25	004	00	0/4	C37	Oil Heated water
VAZZČ	20A	20	3/4	Stainless steel	6
VV706		0.5	_	C37	High temperature oil
VXZ2 _D	25A	25	1	Stainless steel	ingi siipaaace

^{*} For details, refer to pages 209 and 210.

INDEX

Zero Differential Pressure Type Pilot Operated 2 Port Solenoid Valve

VXZ Series

VX2 VXK VXD VXZ VXS VXB VXE VXP VXR VXH VXF VX3 VXA



Comn	non Specifications P. 174
Selec	tion Steps P. 175
	For Air Flow Rate Characteristics, Fluid and Ambient Temperature, Valve Leakage P. 176, 177 How to Order
	For Water Flow Rate Characteristics, Fluid and Ambient Temperature, Valve Leakage P. 179, 180 How to Order
	For Oil Flow Rate Characteristics, Fluid and Ambient Temperature, Valve Leakage P. 182, 183 How to Order
	Flow Rate Characteristics, Fluid and Ambient Temperature, Valve LeakageP. 185, 186 How to OrderP. 187
	For High Temperature Oil Flow Rate Characteristics, Fluid and Ambient Temperature, Valve LeakageP. 188, 189 How to OrderP. 190
Other	Special Options P. 191
Const	ructionP. 194
Dimer	nsions
For	Air, Water, Oil
В	ody material: Resin
	Heated Water, High Temperature Oil
	ody material: C37, Stainless steelP. 200
-	cement Parts P. 201 ary of Terms P. 202
	oid Valve Flow Rate CharacteristicsP. 203
	Rate Characteristics P. 208
	fic Product Precautions P. 209

Common Specifications

Standard Specifications

	Valve construction		Zero differential pressure type pilot operated 2 port diaphragm type	
	Withstand pressure		2.0 MPa (Resin body type 1.5 MPa)	
Valve	Body material		Aluminum, Resin, C37 (Brass), Stainless steel Note 1)	
specifications	ns Seal material		NBR, FKM, EPDM	
	Enclosure		Dust-tight, Water-jet-proof type (equivalent to IP65) Note 2) 4)	
	Environment		Location without the presence of corrosive gases, explosive gases, or constant water adhesic	
	Rated voltage DC		100 VAC, 200 VAC, 110 VAC, 230 VAC, (220 VAC, 240 VAC, 48 VAC, 24 VAC) Note 3	
			24 VDC, (12 VDC) Note 3)	
Coil	Allowable volta	ige fluctuation	±10% of rated voltage	
specifications	Allowable leakage AC (Built-in full-wave rectifier type)		5% or less of rated voltage	
	voltage	DC	2% or less of rated voltage	
	Coil insulation type		Class B (for air, water, oil), Class H (for heated water, high temperature oil)	

Note 1) Body material is aluminum. Resin body is available only for the VXZ2A.

Note 2) Electrical entry flat terminal type terminal is IP40.

Note 3) Voltage in () indicates special voltage. (Refer to page 192.)

Note 4) For enclosure, refer to "Glossary of Terms" on page 202.

⚠ Be sure to read "Specific Product Precautions" before handling.

⚠ When pressure differential is less than 0.01 MPa, operation may become unstable. (Refer to page 195.)

Solenoid Coil Specifications

Normally Closed (N.C.) DC Specification

Class B

Model	Power consumption (W) Note 1)	Temperature rise (°C) Note 2)
VXZ23, 24	7	55
VXZ25, 26	10.5	65

Class H

Model	Power consumption (W) Note 1)	Temperature rise (°C) Note 2)
VXZ23, 24	12	100
VXZ25, 26	15	100

Normally Open (N.O.)

DC Specification

Class B

Model	Power consumption (W) Note 1)	Temperature rise (°C) Note 2)
VXZ2A, 2B	8.5	70
VXZ2C, 2D	12.5	70

Class H

Model	Power consumption (W) Note 1)	Temperature rise (°C) Note 2)
VXZ2A, 2B	12	100
VXZ2C, 2D	15	100

Note 1) Power consumption, Apparent power: The value at ambient temperature of 20°C and when the rated voltage is applied. (Variation: ±10%)

Note 2) The value at ambient temperature of 20°C and when the rated voltage is applied. The value depends on the ambient environment. This is for reference.

Normally Closed (N.C.)

AC Specification (Built-in Full-wave Rectifier Type) Class B

Model	Apparent power (VA) Note 1) 2)	Temperature rise (°C) Note 3)
VXZ23, 24	9.5	70
VXZ25, 26	12	70

Class H

•			
Model	Apparent power (VA) Note 1) 2)	Temperature rise (°C) Note 3)	
VXZ23, 24	12	100	
VXZ25, 26	15	100	

Normally Open (N.O.)

AC Specification (Built-in Full-wave Rectifier Type) Class B

Model	Apparent power (VA) Note 1) 2)	Temperature rise (°C) Note 3)
VXZ2A, 2B	10	70
VXZ2C, 2D	14	70

Class H


Model	Apparent power (VA) Note 1) 2)	Temperature rise (°C) Note 3)
VXZ2A, 2B	12	100
VXZ2C, 2D	15	100

Note 1) Power consumption, Apparent power: The value at ambient temperature of 20°C and when the rated voltage is applied. (Variation: ±10%)

Note 2) There is no difference in the frequency and the inrush and energized apparent power, since a rectifying circuit is used in the AC (Built-in full-wave rectifier type).

Note 3) The value at ambient temperature of 20°C and when the rated voltage is applied. The value depends on the ambient environment. This is for reference.

VXZ Series Selection Steps

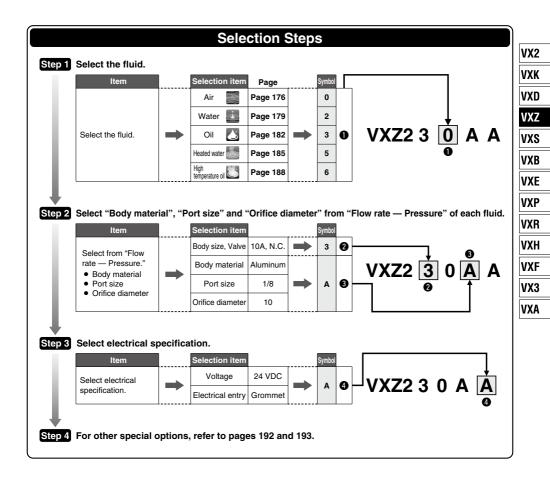

SMC



* Can be used with low vacuum (up to 133 Pa.abs).

Flow Rate Characteristics

N.C.

Symbol



When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.



Normally Closed (N.C.)

Body	Port size (Nominal		Madal	pressure	Max. operating pressure differential Note 3) (MPa)						Max. system	Note 2) Weight
material	diameter)	(mmø)	Model	differential Note 1) (MPa)	AC	DC	C [dm³/(s·bar)]	b	Cv	Effective area (mm²)	(MPa)	(g)
	ø10						6.2		1.7			
Resin	ø3/8"			0	0.7		5.3		1.2		1.5	600
	ø12	10	VXZ230			0.7	8.0		2.0			
Aluminum	1/4 (8A)					1.0	8.5	0.44	2.4			
Aluminum	3/8 (10A)			0	1.0		9.3	0.43	2.6			
C37,	1/2 (15A)	15	VXZ240				23.0	0.34	6.0			720
Stainless	3/4 (20A)	20	VXZ250			1.0	36.0	0.26	9.4			1100
steel	1 (25A)	25	VXZ260			1.0	-	_		185		1300

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. (Refer to page 195.)

Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.

Note 3) Refer to "Glossary of Terms" on page 202 for details on the maximum operating pressure differential and the maximum system pressure.

Fluid and Ambient Temperature

Fluid temperature (°C)	Ambient temperature (°C)
-10 Note) to 60	-20 to 60

Note) Dew point temperature: -10°C or less

Valve Leakage Rate

Internal Leakage

Seal material	Leakage rate (Air) Note 1) 2)
NBR (FKM) Note 3)	15 cm ³ /min or less (Aluminum body type)
	15 cm ³ /min or less (Resin body type)
	1 cm ³ /min or less (Metal body type)

External Leakage

Seal material	Leakage rate (Air) Note 1)
NBR (FKM) Note 3)	15 cm ³ /min or less (Aluminum body type)
	15 cm ³ /min or less (Resin body type)
	1 cm ³ /min or less (Metal body type)

Note 1) Leakage is the value at ambient temperature 20°C.

Note 2) Leakage is the value when the pressure differential ranges from 0.01 MPa to the maximum operating pressure differential.

Note 3) For seal material/FKM, refer to "Other options" on page 192 for the selection.

Note 4) When the product is used with low vacuum (to 133 Pa.abs), give caution to the external leakage outlined above.

Flow Rate Characteristics

N.O.

Symbol



When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.

Normal	ly Open (I	N.O.)										
Body	Port size (Nominal	Orifice diameter	Model	pressure	differential Note 3) (MPa)		Flow rate characteristics				Max. system pressure Note 3)	Note 2) Weight
material	diameter)	(mmø)	Model	differential Note 1) (MPa)	AC	DC	C [dm³/(s·bar)]	b	Cv	Effective area (mm²)	(MPa)	(g)
	ø10					6.2		1.7				
Resin	ø3/8"		VXZ2A0 0 VXZ2B0 VXZ2C0				5.3	0.38	1.2			430
	ø12	10 VX2				8.0		2.0				
Aluminum	1/4 (8A)				0.7	7 0.6	8.5	0.44	14 2.4	_	1.5	630
Aluminum	3/8 (10A)			0.7	0.7 0.6	9.3	0.43	2.6		1.5	630	
C37,	1/2 (15A)	15		-			23.0	0.34	6.0			750
Stainless	3/4 (20A)	20					36.0	0.26	9.4			1150
steel	1 (25A)	25	VXZ2D0	1						185		1350

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. (Refer to page 195.) Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.

Note 3) Refer to "Glossary of Terms" on page 202 for details on the maximum operating pressure differential and the maximum system pressure.

Fluid and Ambient Temperature

Fluid temperature (°C)	Ambient temperature (°C)
-10 Note) to 60	-20 to 60

Note) Dew point temperature: -10°C or less

Valve Leakage Rate

Internal Leakage

Seal material	Leakage rate (Air) Note 1) 2)							
	15 cm ³ /min or less (Aluminum body type)							
NBR (FKM) Note 3)	15 cm ³ /min or less (Resin body type)							
	1 cm ³ /min or less (Metal body type)							

External Leakage

Seal material	Leakage rate (Air) Note 1)
	15 cm ³ /min or less (Aluminum body type)
NBR (FKM) Note 3)	15 cm ³ /min or less (Resin body type)
	1 cm ³ /min or less (Metal body type)

Note 1) Leakage is the value at ambient temperature 20°C.

Note 2) Leakage is the value when the pressure differential ranges from 0.01 MPa to the maximum operating pressure differential.

Note 3) For seal material/FKM, refer to "Other options" on page 192 for the selection.

VX2 VXK

VXD

VXZ VXS VXB

VXE

VXP VXR VXH VXF VX3 VXA





Size/Valve type

10A

15A

20A

25A

type

N.C

N.O.

N.C

N.O

N.C

N.O

N.C

N.O

Symbol Body size

3

4

В

5

С

6

D

How to Order (Single Unit)

diameter

10

15

20

25





VXZ2 3 0 A A 0 For Air

Body material/Port size/Orifice diameter

Port size

3/8 ø10 One-touch fitting

ø3/8" One-touch fitting

ø12 One-touch fitting

1/2

1

Body material

Aluminum

Resin

(With bracket)

C37

Stainless steel

C37

Stainless steel

C37

Stainless steel

Symbol

Α

В

С

D

Е

F

G

н

J

ĸ

L

Common Specifications

Seal material	NBR
Coil insulation type	Class B
Thread type	Rc*

* One-touch fittings are attached to the resin body type.

		cal entry
Symbo	Voltage	Electrical entry
А	24 VDC	Grommet
В	100 VAC	Grommet
С	110 VAC	(With surge voltage
D	200 VAC	suppressor
E	230 VAC	
F	24 VDC	
G	24 VDC	DIN terminal
Н	100 VAC	(With surge voltage
J	110 VAC	suppressor /
K	200 VAC	
L	230 VAC	
М	24 VDC	Conduit terminal
N	100 VAC	(With surge voltage
P	110 VAC	suppressor /
Q	200 VAC	
R	230 VAC	
S	24 VDC	Conduit
Т	100 VAC	(With surge voltage
U	110 VAC	\suppressor /
V	200 VAC	
w	230 VAC	
T U V W	24 VDC	Flat terminal
z		Other voltages

For other special options,

or other special o					
refer to pages 191,	192 and 193.				
	24 VAC				
	48 VAC				
Special voltage	220 VAC				
	240 VAC				
	12 VDC				
DIN terminal with lig	ght				
Conduit terminal with light					
Without DIN connector					
Low concentration ozone resistant					
(Seal material: FKM)					
Seal material: EPD	M				
Oil-free					
G thread					
NPT thread					
With bracket (Stand	dard for resin body)				
Special electrical er	ntry direction				
	· ·				

Dimensions → Page 196 and after

Zero Differential Pressure Type Pilot Operated 2 Port Solenoid Valve VXZ Series



* Can be used with air (Up to 133 Pa.abs for vacuum). Note that the maximum operating pressure differential and flow rate characteristics should be within the specifications for air.

Flow Rate Characteristics

N.C.

Symbol



When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.



VX2

VXK

VXD

VXZ

VXS

VXB

VXE

VXP

VXR

VXH

VXF VX3

VXA

Normally Closed (N.C.)

Body	Port size	Orifice diameter	Model		Max. operating pressure differential (MPa) Note 3		Flow rate ch			Weight Note 2)
material	(Nominal diameter)	(mmø)	Wiodei	differential Note 1) (MPa)	AC	DC	Kv	Cv	pressure Note 3) (MPa)	(g)
	1/4 (8A)	10	VXZ232	0		0.7	1.6	1.9	1.5	600
C37,	3/8 (10A)	10	V X Z Z 3 Z				2.0	2.4		
Stainless	1/2 (15A)	15	VXZ242		1.0		4.6	5.3		720
steel	3/4 (20A)	20	VXZ252		1.0	1.0	7.8	9.2		1100
	1 (25A)	25	VXZ262			1.0	8.7	10.2		1300
	(- /									

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. (Refer to page 195.)

Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.

Note 3) Refer to "Glossary of Terms" on page 202 for details on the maximum operating pressure differential and the maximum system pressure.

Fluid and Ambient Temperature

Fluid temperature (°C)	Ambient temperature (°C)
1 to 60	-20 to 60

Note) With no freezing

Valve Leakage Rate

internai Leakage	
Seal material	Leakage rate (Water) Note 1) 2)
NBR (FKM) Note 3)	0.1 cm ³ /min or less

External Leakage

External Leakage	
Seal material	Leakage rate (Water) Note 1)
NBR (FKM) Note 3)	0.1 cm ³ /min or less

Note 1) Leakage is the value at ambient temperature 20°C.

Note 2) Leakage is the value when the pressure differential ranges from 0.01 MPa to the maximum operating pressure differential.

Note 3) For seal material/FKM, refer to "Other options" on page 192 for the selection.





Flow Rate Characteristics

N.O.

Symbol



When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.



Normally Open (N.O.)

Body	Port size	Orifice diameter	Model	Min. operating pressure	Max. operating pressure differential Note 3 (MPa)		Flow rate characteristics		Max. system	Weight Note 2)
material	(Nominal diameter)	(mmø)	Model	differential Note 1) (MPa)	AC	DC	Kv	Cv	pressure Note 3) (MPa)	(g)
	1/4 (8A)	10	VXZ2A2	0	0.7 0.6		1.6	1.9		000
C37,	3/8 (10A)	10					2.0	2.4		630
Stainless	1/2 (15A)	15	VXZ2B2			4.6	5.3	1.5	750	
steel	3/4 (20A)	20	VXZ2C2				7.8	9.2		1150
	1 (25A)	25	VXZ2D2				8.7	10.2		1350

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. (Refer to page 195.)

Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.

Note 3) Refer to "Glossary of Terms" on page 202 for details on the maximum operating pressure differential and the maximum system pressure.

Fluid and Ambient Temperature

Fluid temperature (°C)	Ambient temperature (°C)		
1 to 60	-20 to 60		

Note) With no freezing

Valve Leakage Rate

Internal Leakage

Seal material	Leakage rate (Water) Note 1) 2)
NBR (FKM) Note 3)	0.1 cm ³ /min or less

External Leakage

Seal material	Leakage rate (Water) Note 1)				
NBR (FKM) Note 3)	0.1 cm ³ /min or less				

Note 1) Leakage is the value at ambient temperature 20°C.

Note 2) Leakage is the value when the pressure differential ranges from 0.01 MPa to the maximum operating pressure differential.

Note 3) For seal material/FKM, refer to "Other options" on page 192 for the selection

Zero Differential Pressure Type Pilot Operated 2 Port Solenoid Valve **VXZ Series**





How to Order (Single Unit)

Orifice diameter

10

15

20

25





VXK

VXD

VXZ

VXS

VXB

VXE

VXP

VXR

VXH VXF VX3 VXA

	VXZ2 3 2 A
	Fluid • 2 For Water
• Size/Valve type	Body material/Port size/Orifice diameter

Α

В

С

D

F

G

Н

J

K

L

Symbol Body material

C37

Stainless steel

C37

Stainless steel

C37

Stainless steel

C37

Stainless steel

Port size

1/4

3/8

1/4

3/8

1/2

3/4

1

Symbol

3

Α

4

В

5

С

6

D

Body size

10A

15A

20A

25A

Valve type

N.C.

N.O.

N.C.

N.O.

N.C.

N.O.

N.C.

N.O.

Common	Specific	ations

Electrical entry

Seal material NBR Coil insulation type Class B VX2 Thread type Rc

♦ Voltage/Electrical entry

Voltage

Symbol

ν

w

Υ

z

200 VAC

230 VAC

24 VDC

	A	24 VDC	Grommet
	В	100 VAC	Grommet
	C	110 VAC	(With surge voltage
	D	200 VAC	suppressor
	E	230 VAC	
	F	24 VDC	
	G	24 VDC	DIN terminal
	Н	100 VAC	(With surge voltage
	J	110 VAC	suppressor
	K	200 VAC	
	L	230 VAC	
	M	24 VDC	Conduit terminal
	N	100 VAC	With surge voltage
	Р	110 VAC	\suppressor / \suppressor / \suppressor \s
	Q	200 VAC	
	R	230 VAC	
	S	24 VDC	Conduit
1	Т	100 VAC	With surge voltage
1	U	110 VAC	\suppressor /

Other voltages

Flat terminal

For other special options, refer to pages 191, 192 and 193.					
	24 VAC				
	48 VAC				
Special voltage	220 VAC				
'	240 VAC				
	12 VDC				
DIN terminal with li	ght				
Conduit terminal with light Without DIN connector					
Seal material: EPD	M				
Oil-free					
G thread					
NPT thread With bracket Special electrical entry direction					

Dimensions → Page 198 and after





Can be used with air and water.

Note that the maximum operating pressure differential and flow rate characteristics should be within the specifications of the fluid used

The kinematic viscosity must not exceed 50 mm²/s. The special construction of the armature adopted in the built-in full-wave rectifier type gives an improvement in OFF response by providing clearance on the absorbed surface when it is switched ON.

Flow Rate Characteristics

N.C.

Symbol



When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.





Normally Closed (N.C.)

Body	Port size	Orifice diameter	Model	Min. operating pressure	Max. operating pressure differential ^{Note 3)} (MPa)		Flow rate characteristics		Max. system	Weight Note 2)																		
material	(Nominal diameter)	(mmø)	Wodei	differential Note 1) (MPa)		DC	Kv	Cv	pressure Note 3) (MPa)	(g)																		
	1/4 (8A)	10	VXZ233				1.6	1.9		000																		
C37,	3/8 (10A)	10	VAZZSS	0	0 0.7		2.0	2.4		600																		
Stainless	1/2 (15A)	15	VXZ243			0	0	0	0	0	0	43 0	VXZ243 0	0	0	0	0	0	0	0	0	0	0	0.7	4.6	5.3	1.5	720
steel	3/4 (20A)	20	VXZ253									7.8	9.2		1100													
	1 (25A)	25	VXZ263			8.7	10.2	[1300																			

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. (Refer to page 195.)

Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.

Note 3) Refer to "Glossary of Terms" on page 202 for details on the maximum operating pressure differential and the maximum system pressure.

Fluid and Ambient Temperature

Fluid temperature (°C)	Ambient temperature (°C)
-5 Note) to 60	-20 to 60

Note) Kinematic viscosity: 50 mm²/s or less

Valve Leakage Rate

Internal Leakage

Seal material	Leakage rate (Oil) Note 1) 2)
FKM	0.1 cm ³ /min or less

External Leakage

Seal material	Leakage rate (Oil) Note 1)
FKM	0.1 cm ³ /min or less

Note 1) Leakage is the value at ambient temperature 20°C.

Note 2) Leakage is the value when the pressure differential ranges from 0.01 MPa to the maximum operating pressure differential.

Zero Differential Pressure Type Pilot Operated 2 Port Solenoid Valve VXZ Series



VX2 VXK

VXD

VXZ VXS VXB

VXE

VXP

VXR VXH VXF VX3 VXA



N.O.

Symbol



When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.



Normally Open (N.O.)

	······································												
Body	Port size	Orifice diameter	Model	Min. operating pressure	Max. operating pressur	e differential ^{Note 3)} (MPa)	Flow rate ch	naracteristics	Max. system	Weight Note 2)			
material	(Nominal diameter)	(mmø)	Wodel	differential Note 1) (MPa)	AC	DC	Kv	Cv	pressure Note 3) (MPa)	(g)			
	1/4 (8A)	10	VXZ2A3	0			1.6	1.9		630			
C37,	3/8 (10A)	10	VAZZAS				2.0	2.4					
Stainless	1/2 (15A)	15	VXZ2B3		0	3 0	YXZ2B3 0 0.7	0 0.7 0.6	0.6	4.6	5.3	1.5	750
steel	3/4 (20A)	20	VXZ2C3				7.8	9.2		1150			
	1 (25A)	25	VXZ2D3				8.7	10.2		1350			

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. (Refer to page 195.)

Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.

Note 3) Refer to "Glossary of Terms" on page 202 for details on the maximum operating pressure differential and the maximum system pressure.

Fluid and Ambient Temperature

Fluid temperature (°C)	Ambient temperature (°C)
E Note) to GO	-20 to 60

Note) Kinematic viscosity: 50 mm²/s or less

Valve Leakage Rate

Internal Leakage

Seal material	Leakage rate (Oil) Note 1) 2)
FKM	0.1 cm ³ /min or less

Ε

:xternai Leakage					
Seal material	Leakage rate (Oil) Note 1)				
EKM	0.1 cm ³ /min or less				

Note 1) Leakage is the value at ambient temperature 20°C.

Note 2) Leakage is the value when the pressure differential ranges from 0.01 MPa to the maximum operating pressure differential.



5

С

6

D


20A

25A

How to Order (Single Unit)







3/4

Common Specifications

Common opecim	· · · · · · · · ·
Seal material	FKM
Coil insulation type	Class B
Thread type	Rc

Size/Valve type ◆ Body material/Port size/Orifice diameter

Symbol	Body size	Valve type		Symbol	Body material	Port size	Orifice diameter
3	10A	N.C.	Ī	Α	C37	1/4	
Α	IUA	N.O.		В	U37	3/8	40
			C Ctainles	Stainless steel	1/4	10	
			```	D	Starriess steer	3/8	
4		N.C.	Τ	F	C37		
B	15A	N O	1	G	Stainless steel	1/2	15

Н

Κ

L

C37

Stainless steel

C37

Stainless steel

N.C.

N.O.

N.C.

N.O.

Volt	age/Electric	cal entry

	• VOIT	age/Electric	cai entry
	Symbol	Voltage	Electrical entry
	A	24 VDC	Grommet
	В	100 VAC	Grommet
	С	110 VAC	( With surge ) Voltage
	D	200 VAC	suppressor /
	E	230 VAC	
	F	24 VDC	
	G	24 VDC	DIN terminal
	Н	100 VAC	( With surge voltage
	J	110 VAC	\suppressor /
	K	200 VAC	
	L	230 VAC	
	M	24 VDC	Conduit terminal
	N	100 VAC	With surge voltage
	Р	110 VAC	\suppressor /
	Q	200 VAC	
	R	230 VAC	
	S	24 VDC	Conduit
	Т	100 VAC	With surge voltage
	U	110 VAC	\suppressor /
	٧	200 VAC	
	W	230 VAC	
	Y	24 VDC	Flat terminal
	z		Other voltages

25

20

For other special options,

refer to pages 191, 192 and 193.				
	24 VAC			
	48 VAC			
Special voltage	220 VAC			
	240 VAC			
	12 VDC			
DIN terminal with light				
Conduit terminal with light				
Without DIN connector				
Oil-free				
G thread				
NPT thread				
With bracket				
Special electrical entry direction				

## Zero Differential Pressure Type Pilot Operated 2 Port Solenoid Valve VXZ Series



# For Heated Water

Can be used with air (up to 99°C) and water. Note that the maximum operating pressure differential and flow rate characteristics should be within the specifications of the fluid used.

#### Flow Rate Characteristics

N.C.

#### Symbol



When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.

Normally Closed (N.C.)

	, 0.0000	(												
Body	Port size	Orifice diameter	Model	Min. operating pressure	Min. operating pressure Max. operating pressure differ		Flow rate characteristics		Max. system	Weight Note 2)				
material	(Nominal diameter)	(mmø)	Wodel	differential Note 1) (MPa)	AC	DC	Kv	Cv	pressure Note 3) (MPa)	(g)				
	1/4 (8A)	10	VXZ235	0		0.7	1.6	1.9		600				
C37,	3/8 (10A)	10	V AZZ35				2.0	2.4						
Stainless	1/2 (15A)	15	VXZ245		0	0	0	0	1.0		4.6	5.3	1.5	720
steel	3/4 (20A)	20	VXZ255			1.0	7.8	9.2		1100				
	1 (25A)	25	VXZ265			1.0	8.7	10.2		1300				

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. (Refer to page 195.)

Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.

Note 3) Refer to "Glossary of Terms" on page 202 for details on the maximum operating pressure differential and the maximum system pressure.

## Fluid and Ambient Temperature

Fluid temperature (°C)	Ambient temperature (°C)
1 to 99	-20 to 60

Note) With no freezing

## Valve Leakage Rate

#### Internal Leakage

Seal material	Leakage rate (Water) Note 1) 2)			
EPDM	0.1 cm ³ /min or less			

#### External Leakage

Seal material	Leakage rate (Water) Note 1)					
EPDM	0.1 cm ³ /min or less					

Note 1) Leakage is the value at ambient temperature 20°C.

Note 2) Leakage is the value when the pressure differential ranges from 0.01 MPa to the maximum operating pressure differential.

VX2

VXK

VXD

VXZ VXS

VXB

VXE

VXP


VXR

VXH

VXF VX3

VXA





#### Flow Rate Characteristics

N.O.

#### Symbol



When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.



#### Normally Open (N.O.)

	,	,								
Body	Port size	Orifice diameter	Model	Min. operating pressure	Max. operating pressure	e differential ^{Note 3)} (MPa)	Flow rate ch	aracteristics	Max. system	Weight Note 2)
material	(Nominal diameter)	(mmø)	Model	differential Note 1) (MPa)		DC	Kv	Cv	pressure Note 3) (MPa)	(g)
	1/4 (8A)	10	VXZ2A5	0			1.6	1.9		630
C37,	3/8 (10A)	10	VAZZAS				2.0	2.4		
Stainless	1/2 (15A)	15	VXZ2B5		0.7	0.6	4.6	5.3	1.5	750
steel	3/4 (20A)	20	VXZ2C5					7.8	9.2	
	1 (25A)	25	VXZ2D5				8.7	10.2		1350

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. (Refer to page 195.)

Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.

Note 3) Refer to "Glossary of Terms" on page 202 for details on the maximum operating pressure differential and the maximum system pressure.

## Fluid and Ambient Temperature

Fluid temperature (°C)	Ambient temperature (°C)
1 to 99	-20 to 60

Note) With no freezing

## Valve Leakage Rate

#### Internal Leakage

internal Ecakage							
Seal material	Leakage rate (Water) Note 1) 2)						
EPDM	0.1 cm ³ /min or less						

#### External Leakage

Seal material	Leakage rate (Water) Note 1)
EPDM	0.1 cm ³ /min or less

Note 1) Leakage is the value at ambient temperature 20°C.

Note 2) Leakage is the value when the pressure differential ranges from 0.01 MPa to the maximum operating pressure differential.

#### **Zero Differential Pressure Type** Pilot Operated 2 Port Solenoid Valve VXZ Series



VX2

VXK

VXD

VXZ

VXS

VXB

VXE

**VXP** 

VXR

VXH

VXF


VX3

VXA



## How to Order (Single Unit)



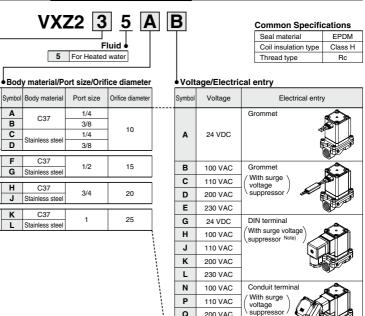

Q

R т

U

٧

w

z

200 VAC 230 VAC

100 VAC

110 VAC

200 VAC

230 VAC

Note) For the class H type DIN terminal, use it in combination with the connector provided.

Conduit

voltage

With surge

suppressor

## For other special options,

Other voltages

refer to pages 191, 192 and 193.					
	24 VAC				
Consist valtage	48 VAC				
Special voltage	220 VAC				
	240 VAC				
DIN terminal with li	ght				
Conduit terminal wi	th light				
Oil-free G thread NPT thread With bracket Special electrical entry direction					

Dimensions → Page 200

◆Size/Valve type

Body size

10A

15A

20A

25A

Valve type

N.C.

N.O.

N.C.

N.O.

N.C.

N.O.

N.C.

N.O.

Symbol Body material

C37

Stainless steel

Stainless steel

C37

Stainless steel

C37

Stainless steel

1

Α

В

С

D

F

G

Н

J

Κ

L

Symbol

3

Α

4

В

5

С

6

D

**ØSMC** 



## For High Temperature Oil

Can be used with air (up to 99°C), water (up to 99°C) and oil. Note that the maximum operating pressure differential and flow rate characteristics should be within the specifications of the fluid used

#### 

The kinematic viscosity must not exceed 50 mm²/s. The special construction of the armature adopted in the built-in full-wave rectifier type gives an improvement in OFF response by providing clearance on the absorbed surface when it is switched ON.

## Flow Rate Characteristics

N.C.

## Symbol



When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.



#### Normally Closed (N.C.)

Body	Port size	Orifice diameter	Model	Min. operating pressure	Max. operating pressure	e differential ^{Note 3)} (MPa)	Flow rate ch	aracteristics	Max. system	Weight Note 2)								
material	(Nominal diameter)	(mmø)	Model	differential Note 1) (MPa)	AC	DC	Kv	Cv	pressure Note 3) (MPa)	(g)								
	1/4 (8A)	10	VXZ236				1.6	1.9		600								
C37,	3/8 (10A)	10	V A Z Z 30	0		2.0	2.4		600									
Stainless	1/2 (15A)	15	VXZ246		0	0	0	_	0	.7	4.6	5.3	1.5	720				
steel	3/4 (20A)	20	VXZ256															
	1 (25A)	25	VXZ266	]			8.7	10.2		1300								

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. (Refer to page 195.)

Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.

Note 3) Refer to "Glossary of Terms" on page 202 for details on the maximum operating pressure differential and the maximum system pressure.

#### Fluid and Ambient Temperature

Fluid temperature (°C)	Ambient temperature (°C)
-5 Note) to 100	-20 to 60

Note) Kinematic viscosity: 50 mm²/s or less

#### Valve Leakage Rate

Internal Leakage

FKM 0.1 cm ³ /min or less	Seal material	Leakage rate (Oil) Note 1) 2)
	FKM	0.1 cm ³ /min or less

#### **External Leakage**

Seal material	Leakage rate (Oil) Note 1)
FKM	0.1 cm ³ /min or less

Note 1) Leakage is the value at ambient temperature 20°C.

Note 2) Leakage is the value when the pressure differential ranges from 0.01 MPa to the maximum operating pressure differential.

#### **Zero Differential Pressure Type** Pilot Operated 2 Port Solenoid Valve VXZ Series



VX2 VXK

VXD

VXZ VXS VXB

VXE

**VXP** 

VXR VXH VXF VX3 VXA



#### Flow Rate Characteristics

N.O.

#### Symbol



When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.

Normally Open (N.O.)

	ionian) open (me.)													
Body	Port size	Orifice diameter	Model	Min. operating pressure	in. operating pressure Max. operating pressure differential Note 3 (MPa)		Flow rate characteristics		Max. system	Weight Note 2)				
material	(Nominal diameter)	(mmø)	Model	differential Note 1)(MPa)	AC	DC	Kv	Cv	pressure Note 3) (MPa)	(g)				
	1/4 (8A)	10	VXZ2A6	0			1.6	1.9		630				
C37,	3/8 (10A)	10	VAZZAO				2.0	2.4						
Stainless	1/2 (15A)	15	VXZ2B6		0	0		VXZ2B6 0	0.7	0.6	4.6	5.3	1.5	750
steel	3/4 (20A)	20	VXZ2C6							7.8	9.2		1150	
	1 (25A)	25	VXZ2D6				8.7	10.2		1350				

Note 1) The operation of the valve may be unstable due to the capacity of the pressure supply source such as pumps and compressors or the pressure loss by the orifice of piping. Please contact SMC to check if the required valve size can be used in the application. (Refer to page 195.)

Note 2) Weight of grommet type. Add 10 g for conduit, 30 g for DIN terminal, and 60 g for conduit terminal type respectively.

Note 3) Refer to "Glossary of Terms" on page 202 for details on the maximum operating pressure differential and the maximum system pressure.

## Fluid and Ambient Temperature

Fluid temperature (°C)	Ambient temperature (°C)
5 Note) to 100	-20 to 60

Note) Kinematic viscosity: 50 mm²/s or less

#### Valve Leakage Rate

#### Internal Leakage

Seal material	Leakage rate (Oil) Note 1) 2)
FKM	0.1 cm ³ /min or less

#### External Leakage

Seal material	Leakage rate (Oil) Note 1)					
FKM	0.1 cm ³ /min or less					

Note 1) Leakage is the value at ambient temperature 20°C.

Note 2) Leakage is the value when the pressure differential ranges from 0.01 MPa to the maximum operating pressure differential.



15A

N.O.


D



### How to Order (Single Unit)





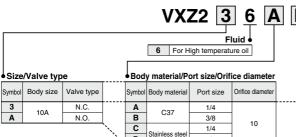

	Symbol	Body material	Port size	Orifice diameter				
	Α	C37	1/4		Γ			
	В	U37	3/8	40				
	С	Ctoinless steel	1/4	10				
١,	D	Stainless steel	3/8					

ы		IN.O.	L	u	Stall liess steel		
5	20A	N.C.		Н	C37	3/4	20
С	20A	N.O.	l	J	Stainless steel	3/4	20
6	25A	N.C.		K	C37	1	25
	_ 23A		1			1	ı 20

Stainless steel

#### Common Specifications

oommon opcomounome					
Seal material	FKM				
Coil insulation type	Class H				
Thread type	Rc				

Voltage/	Electrical	entry

	Voltage/Electrical entry							
	Symbol	Voltage	Electrical entry					
	A	24 VDC	Grommet					
	В	100 VAC	Grommet					
	С	110 VAC	With surge voltage					
	D	200 VAC	\suppressor /					
	E	230 VAC						
	G	24 VDC	DIN terminal					
	H	100 VAC	With surge voltage suppressor Note)					
	J	110 VAC						
	K	200 VAC						
١,	L	230 VAC						
	N	100 VAC	Conduit terminal					
	Р	110 VAC	With surge voltage					
	Q	200 VAC	\suppressor /					
	R	230 VAC						
	Т	100 VAC	Conduit					
	C	110 VAC	With surge voltage					
	٧	200 VAC	\suppressor /					
	W	230 VAC						
	Z	Other voltages						


Note) For the class H type DIN terminal, use it in combination with the connector provided.

## For other special options

ror other special options,						
refer to pages 191, 192 and 193.						
	24 VAC					
Special voltage	48 VAC					
Special voltage	220 VAC					
	240 VAC					
DIN terminal with light						
Conduit terminal with light						
Oil-free						
G thread						
NPT thread	NPT thread					
With bracket						
Special electrical entry direction						
•						

# VXZ Series **Other Special Options**

## **Electrical Options**



-		14.90, -	.icoti ioai	cita y, Licoti iodi optioni
Specification	Symbol	Class H*	Voltage	Electrical entry
	1A	•	48 VAC	
	1B	•	220 VAC	Grommet
	1C	•	240 VAC	(With surge voltage suppressor)
	1U	•	24 VAC	
	1D	1	12 VDC	Grommet
	1E	_	12 VDC	Grommet (With surge voltage suppressor)
	1F	•	48 VAC	
Special voltage	1G	•	220 VAC	DIN terminal
	1H	•	240 VAC	(With surge voltage suppressor)
	1V	•	24 VAC	(Will surge voltage suppressor)
<u> </u>	1J	_	12 VDC	
Ğ.	1K	•	48 VAC	
) g	1L	•	220 VAC	Conduit terminal
0)	1M		240 VAC	
	1W	•	24 VAC	(With surge voltage suppressor)
	1N	1	12 VDC	
	1P		48 VAC	
	1Q	•	220 VAC	Conduit
	1R	•	240 VAC	
	1Y		24 VAC	(With surge voltage suppressor)
	1S		12 VDC	
	1T	_	12 VDC	Flat terminal

2A		24 VDC	
2B		100 VAC	
2C		110 VAC	
2D		200 VAC	
2E	•	230 VAC	DIN terminal
2F		48 VAC	(With surge voltage suppressor)
2G		220 VAC	
2H		240 VAC	
2V		24 VAC	
2J	_	12 VDC	
2K	_	24 VDC	
2L		100 VAC	
2M		110 VAC	
2N		200 VAC	
2P		230 VAC	Conduit terminal
2Q		48 VAC	(With surge voltage suppressor)
2R	•	220 VAC	
2S		240 VAC	
2W	•	24 VAC	
2T	_	12 VDC	
	2C 2D 2E 2F 2G 2H 2V 2J 2K 2L 2M 2N 2P 2Q 2Q 2R 2S	2B	2B

	21		12 000	
	3A	1	24 VDC	
to	3B	_	100 VAC	
эес	3C			
Ju.	3D	_	200 VAC	
Ö	3E	_	230 VAC	DIN terminal
_	3F	_	48 VAC	(With surge voltage suppressor)
T I	3G	_	220 VAC	
h	3H	_	240 VAC	
Without DIN connector	3V	_	24 VAC	
-	3J	_	12 VDC	

●: Also applicable to Class "H" coil. Options marked with ● are available for Class "H" coil. Applicable for all when the coil insulation class is Class "B".

## **Other Options**

Low concentration ozone resistant and applicable to deionized water Oil-free Port thread

Other option

VXZ2 3 Enter standard product number.

Low concentration ozone resistant and applicable to deionized water/Oil-free/Port thread


Symbol	Low concentration ozone resistant and applicable to deionized water *1, *3 (Seal material: FKM)	Oil-free	Port thread				
Nil	_	_	Rc, One-touch fitting*2				
Α			G*4				
В	_	_	NPT				
С	0	_	Rc, One-touch fitting*2				
D			G*4				
E	<u> </u>		NPT				
F	0		G*4				
G			NPT				
Н			Rc, One-touch fitting*2				
K	0	0	G*4				
L			NPT				
Z	=	0	Rc, One-touch fitting*2				
	—————————————————————————————————————	ter (VX					

- *2 When the body is resin, One-touch fittings are equipped as standard. *3 When using deionized water or any other fluid that may corrode C37
- (brass), select a stainless steel body. *4 For connection, prepare a fitting compliant with ISO 16030 and JIS B

#### Made to Order

#### <Special lead wire length>

Produced upon receipt of order.



* Enter symbols in the order below when ordering a combination of electrical option, other option, etc. Example) VXZ2 3 2 A Z 1A Z XB A Electrical option Special electrical entry direction With bracket Other option

VXK

VX2

VXD VXZ

VXS

VXB VXE


**VXP** 

VXF VX3

VXA


# Installation Options (Mounting Option/Special Electrical Entry Direction)


The following shows combinations that can be selected using installation options.





#### **Special Electrical Entry Direction**



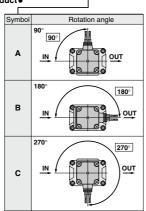


* Available for the VXZ2A to 2D.




VXZ2 XBA

number.

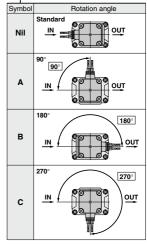

- *1 Available for the VXZ2A to 2D.
- *2 Bracket is attached as standard with the resin body type (VXZ2³_A0^D_E), so it is no necessary to add XB to the part number.
- *3 Bracket is packed in the same container as the main body.

#### VXZ Bracket mounting dimensions



Other option

With bracket


^{*} Enter symbols in the order below when ordering a combination of electrical option, other option, etc.

Example) VXZ2 3 2 A Z 1A Z XB A

Electrical option 
Special electrical entry direction

## Installation Options

(Mounting Option/Special Electrical Entry Direction)



With bracket/Special electrical entry direction

Seal material: EPDM

ı	n brac	ket/Special electi	rical entry direction •						
	Cumhal	Specifications							
	Symbol	Electrical entry direction	Bracket						
	Nil	IN side (Standard)							
	Α	90°	None						
	В	180°	None						
	C	270°							
	D	IN side (Standard)							
	E	90°	With bracket*1						
	F	180°	with bracket						
	G	270°							

- *1 Not available for resin body type of the VXZ2A
- *2 "Other options", which can be combined, are Nil, A, B, D, E, Z (Oil-free, G thread specifications, NPT thread specifications).
- *3 Available for air and water.

**Electrical entry direction** 

Symbol	VXZ2 to VXZ2 6	Symbol	VXZ2 ³ to VXZ2 ⁶				
Nil	Standard	А	90°				
Ď	OUT	Ė	IN COUT				
В	180° IN ¶₽⊤¶¶ OUT	_	270° IN ₹₽Т% OUT				
F	1001	Ç G	<u> </u>				

* Enter symbols in the order below when ordering a combination of electrical option, other option, seal material: EPDM, with bracket, mounting holes on the bottom side of the body and special electrical entry direction.

Electrical option Other O

VX2

VXK

VXD VXZ

VXS

VXB

VXE

VXR

VXH


VXF VX3

VXA

## VXZ Series Construction

## Normally Closed (N.C.)


#### Body material: Aluminum, C37, Stainless steel

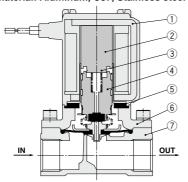

#### **Component Parts**

ĺ	No.	Description	Material
	1	Solenoid coil	Cu + Fe + Resin
	2	Tube assembly	Stainless steel
ľ	3	Return spring	Stainless steel
	4	Armature/Diaphragm assembly	Stainless steel, NBR, FKM, EPDM
	5	Stopper	NBR, FKM, EPDM
ľ	6	Bonnet	C37, Stainless steel, Aluminum
	7	Body	C37, Stainless steel, Aluminum

#### Body material: Resin

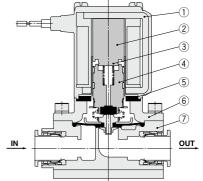


#### **Component Parts**

No.	Description	Material
1	Solenoid coil	Cu + Fe + Resin
2	Tube assembly	Stainless steel
3	Return spring	Stainless steel
4	Armature/Diaphragm assembly	Stainless steel, NBR, FKM
5	Stopper	NBR, FKM
6	Bonnet	Aluminum
7	Body	Resin (PBT)

## Normally Open (N.O.)


## Body material: Aluminum, C37, Stainless steel

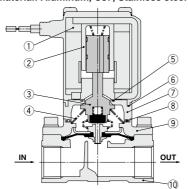

#### **Component Parts**

No.	Description	Material
1	Solenoid coil	Cu + Fe + Resin
2	Sleeve assembly	Stainless steel, Resin (PPS)
3	Push rod/Diaphragm assembly	Stainless steel, NBR, FKM, EPDM
4	Spring	Stainless steel
5	O-ring A	NBR, FKM, EPDM
6	O-ring B	NBR, FKM, EPDM
7	Adapter	Resin (PPS)
8	O-ring C	NBR, FKM, EPDM
9	Bonnet	Aluminum, C37, Stainless steel
10	Body	Aluminum, C37, Stainless steel

#### **Body material: Resin**

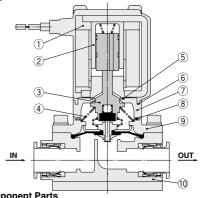

Component Parts

No.	Description	Material
1	Solenoid coil	Cu + Fe + Resin
2	Sleeve assembly	Stainless steel, Resin (PPS)
3	Push rod/Diaphragm assembly	Stainless steel, NBR, FKM
4	Spring	Stainless steel
5	O-ring A	NBR, FKM
6	O-ring B	NBR, FKM
7	Adapter	Resin (PPS)
8	O-ring C	NBR, FKM
9	Bonnet	Aluminum
10	Body	Resin (PBT)

#### **Working Principle**

#### De-energized

The fluid enters from the IN goes through the supply orifice to fill the pressure action chamber. Main valve is closed by the pressure in the pressure action chamber and the reaction force of the return spring.

#### Energized (Pilot valve open)

When the coil is energized, the armature is attracted causing the pilot orifice to opening. The fluid filling the pressure action chamber flows to the OUT side through the pilot orifice.

#### Energized (Main valve open)

The pressure in the pressure action chamber decreases by discharging fluid through the pilot onfice. Because the force which pushes down the valve is reduced by the discharge of the fluid, the force that pushes up the main valve overcomes the push down force and opens the main valve. The main valve opens by the lift spring reaction force even if pressure on the IN side is 0 MPa or very low pressure.



VXK

VXD VXZ

VXS

VXB

VXE

VXP


Lift

VXR

Internal pressure VXF

VX3

VXA

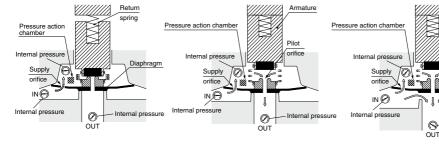


## **⚠** Warning

Unstable flow may occur with the product under the following conditions: • low flow from the pump or compressor, etc. • use of several elbows or tees in the circuit, or • thin nozzles installed at the end of the piping etc. This can cause valve opening/closing failure, or oscillation, and cause a valve malfunction. If products are used with vacuum, then the vacuum level can be unstable due to these conditions. After confirming the circuit flow rate, be sure to select a compatible valve for use.




## **Dimensions/Body Material: Resin (One-touch Fitting Type)**

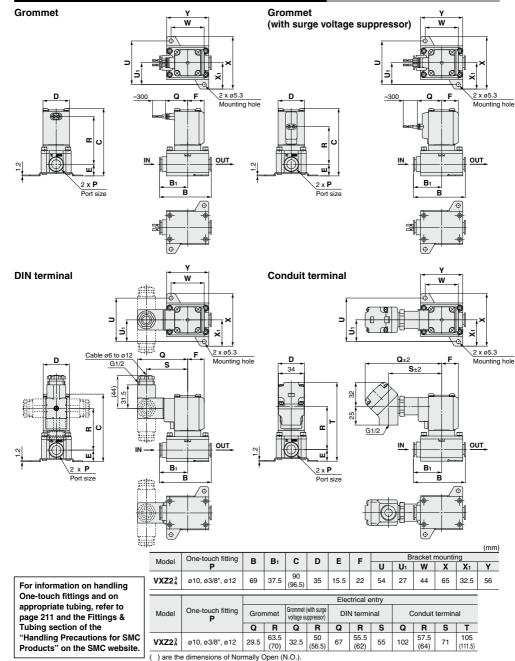





## **Dimensions/Body Material: Resin (One-touch Fitting Type)**

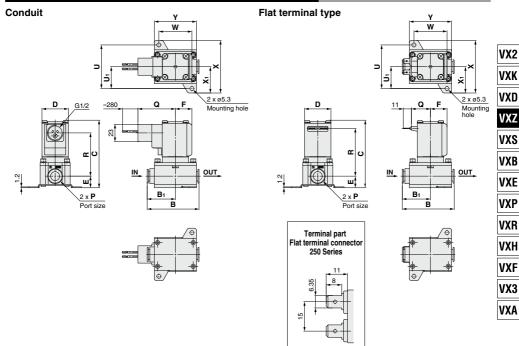

													(mm)
Model	One-touch fitting	В	B ₁	С	D	Е	F	Bracket mounting					
Model	Р	-						U	U₁	w	X	<b>X</b> 1	Y
VXZ2¾	ø10, ø3/8", ø12	69	37.5	90 (96.5)	35	15.5	22	54	27	44	65	32.5	56

Model		Electrical entry							
	One-touch fitting	Con	duit	Flat terminal					
	Р	Q	R	Q	R				
VXZ23	ø10, ø3/8", ø12	50	57.5	25.5	63.5				
VAZZA	010, 03/6, 012	50	(64)	25.5	(70)				

^( ) are the dimensions of Normally Open (N.O.).










## Dimensions/Body Material: Aluminum, C37, Stainless Steel

#### Grommet


#### Grommet (with surge voltage suppressor)




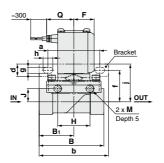

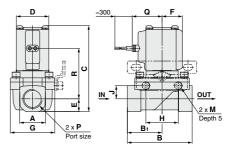

#### **DIN terminal**

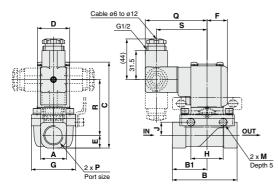



												(mm)
Model	Port size	A	В	B ₁	С	D	E	F	G	н	J	М
VXZ2 ³	1/4, 3/8	21 <22>	57	28.5	85 (91.5)	35	10.5	22	40	35	10	M5
VXZ2 ⁴ _B	1/2	28	70	37.5	93 (99.5)	35	14	22	48	35	14.2	M5
VXZ25	3/4	33.5	71	38.5	104 (110.5)	40	17	24.5	62	33	15.2	M6
VXZ2 ⁶	1	42	95	49.5	110 (116)	40	20	24.5	66	37	17.2	M6

Model	Port size				nounting						
wodei	P		a1Note)	b	d	е	f	g	h	i	j
VXZ2 ³	1/4, 3/8	56	52	75		2.3	30	6.5	10.5	31	37
VXZ2 ⁴ _B	1/2	56	60	75	13.5	2.3	34.5	6.5	10.5	35	41
VXZ2 ⁵ c	3/4	70.5	68	92	13.5	2.3	39	6.5	10.5	43	46
VXZ28	1	70.5	73	92		2.3	41	6.5	10.5	45	48

		Electrical entry										
Model	Port size	G	Frommet		net (with surge e suppressor)	DIN terminal						
		Q	R	Q	R	Q	R	S				
VXZ2 ³	1/4, 3/8	29.5	63.5 (70)	32.5	50 (56.5)	67	55.5 (62)	55				
VXZ2 ⁴ _B	1/2	29.5	68.5 (74.5)	32.5	55 (61)	67	60.5 (66.5)	55				
VXZ25	3/4	32	76.5 (83)	35	63 (69.5)	69.5	68.5 (75)	57.5				
VXZ28	1	32	79.5 (85)	35	66 (71.5)	69.5	71.5 (77)	57.5				

^( ) are the dimensions of Normally Open (N.O.). < > are the dimensions of aluminum body. Note) Old VXZ bracket mounting hole center position





VXR

VXH VXF


VX3

VXA


## Dimensions/Body Material: Aluminum, C37, Stainless Steel


#### Conduit terminal


#### Conduit

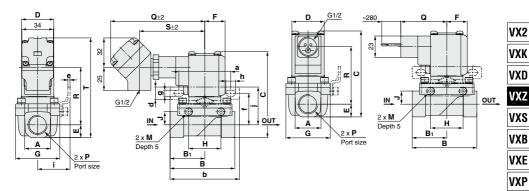


#### Flat terminal type



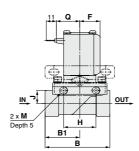



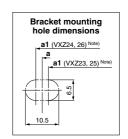

												(mm)
Model	Port size	A	В	B ₁	С	D	E	F	G	н	J	М
VXZ2 ³	1/4, 3/8	21 <22>	57	28.5	85 (91.5)	35	10.5	22	40	35	10	M5
VXZ2 ⁴ _B	1/2	28	70	37.5	93 (99.5)	35	14	22	48	35	14.2	M5
VXZ25	3/4	33.5	71	38.5	104 (110.5)	40	17	24.5	62	33	15.2	M6
VXZ2 ⁶ _D	1	42	95	49.5	110 (116)	40	20	24.5	66	37	17.2	M6

Model	Port size				Bı	racket i	mountir	ng			
Model	Р	а	a1 Note)	b	d	е	f	g	h	i	j
VXZ2 ³	1/4, 3/8	56	52	75		2.3	30	6.5	10.5	31	37
VXZ2 ⁴ _B	1/2	56	60	75	13.5	2.3	34.5	6.5	10.5	35	41
VXZ2 ⁵ _C	3/4	70.5	68	92	13.5	2.3	39	6.5	10.5	43	46
VXZ28	1	70.5	73	92	]	2.3	41	6.5	10.5	45	48

			Electrical entry										
Model	Port size		Conduit	termina	al		Conduit	Flat terminal					
	P	Q	R	S	Т	Q	R	Q	R				
VXZ2 ³	1/4, 3/8	102	57.5 (64)	71	100 (106.5)	50	57.5 (64)	25.5	63.5 (70)				
VXZ2 ⁴ _B	1/2	102	62.5 (68.5)	71	108 (114.5)	50	62.5 (68.5)	25.5	68.5 (74.5)				
VXZ2 ⁵ _C	3/4	104.5	70.5 (77)	73.5	119 (126)	52.5	70.5 (77)	28	76.5 (82.5)				
VXZ25	1	104.5	73.5 (79)	73.5	125 (131)	52.5	73.5 (79)	28	79.5 (85)				

⁾ are the dimensions of Normally Open (N.O.). < > are the dimensions of aluminum body. Note) Old VXZ bracket mounting hole center position






## For Heated Water, High Temperature Oil

### **Dimensions/Body Material: C37, Stainless Steel**


#### Grommet

#### Conduit terminal

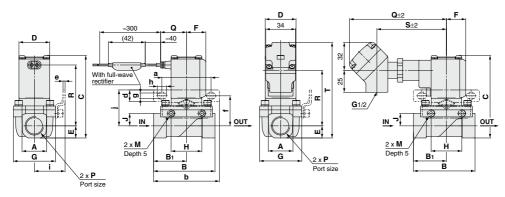

#### **DIN terminal**



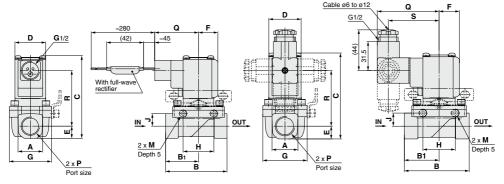

												(mm)
Model	Port size	Α	В	B ₁	С	D	E	F	G	н	J	M
VXZ2 ³	1/4, 3/8	21	57	28.5	85 (91.5)	35	10.5	22	40	35	10	M5
VXZ2 ⁴ _B	1/2	28	70	37.5	93 (99.5)	35	14	22	48	35	14.2	M5
VXZ2 ⁵ _C	3/4	33.5	71	38.5	104 (110.5)	40	17	24.5	62	33	15.2	M6
VXZ25	1	42	95	49.5	110 (116)	40	20	24.5	66	37	17.2	M6

Model	Port size		Bracket mounting									
wodei	P	а	a1Note)	b	d	е	f	g	h	i	j	
VXZ2 ³	1/4, 3/8	56	52	75		2.3	30	6.5	10.5	31	37	
VXZ2 ⁴ _B	1/2	56	60	75	13.5	2.3	34.5	6.5	10.5	35	41	
VXZ2 ⁵	3/4	70.5	68	92	13.5	2.3	39	6.5	10.5	43	46	
VXZ2 ⁶ _D	1	70.5	73	92		2.3	41	6.5	10.5	45	48	

Bracket mounting hole dimensions							
a1 (VXZ24, 26) N	lote)						
a1 (VXZ23,	25) ^{Note)}						

	Port size		Electrical entry												
Model	POILSIZE	(	Grommet	Conduit terminal					Conduit	DIN terminal					
		Q	R	Ø	R	S	Т	Q	R	Q	R	S			
VXZ2 ³	1/4, 3/8	29.5	63.5 (70)	110.5	57.5 (64)	79.5	100 (106.5)	50	57.5 (64)	67	55.5 (62)	55			
VXZ2 ⁴ _B	1/2	29.5	68.5 (74.5)	110.5	62.5 (68.5)	79.5	108 (114.5)	50	62.5 (68.5)	67	60.5 (66.5)	55			
VXZ2 ⁵	3/4	32	76.5 (83)	113	70.5 (77)	82	119 (126)	52.5	70.5 (77)	69.5	68.5 (75)	57.5			
VXZ25	1	32	79.5 (85)	113	73.5 (79)	82	125 (131)	52.5	73.5 (79)	69.5	71.5 (77)	57.5			

^( ) are the dimensions of Normally Open (N.O.). Note) Old VXZ bracket mounting hole center position

#### **Zero Differential Pressure Type** Pilot Operated 2 Port Solenoid Valve



#### **Replacement Parts**

DIN Connector Part No.



<u< th=""><th>OII</th><th>ını</th><th>Sula</th><th>atio</th><th>n I</th><th>ype</th><th>y-or</th><th>Class</th><th>B&gt;</th><th></th></u<>	OII	ını	Sula	atio	n I	ype	y-or	Class	B>	
		-		_					-	Ī

Electrical option	Rated voltage	Connector part no.
	24 VDC	
	12 VDC	
	100 VAC	
	110 VAC	
None	200 VAC	3G-GDM2A-G
INOTIE	220 VAC	3G-GDIVIZA-G
	230 VAC	
	240 VAC	
	24 VAC	
	48 VAC	
	24 VDC	GDM2A-L5
	12 VDC	GDM2A-L6
	100 VAC	GDM2A-L1
	110 VAC	GDM2A-L1
Mith limbt	200 VAC	GDM2A-L2
With light	220 VAC	GDM2A-L2
	230 VAC	GDM2A-L2
	240 VAC	GDM2A-L2
	24 VAC	GDM2A-L5
	48 VAC	GDM2A-L15

<Coil Insulation Type/For Class H>

Electrical option	Rated voltage	Connector part no.
	24 VDC	GDM2A-G-S5
	100 VAC	
	110 VAC	
	200 VAC	
None	220 VAC	GDM2A-R
	230 VAC	GDIVIZA-N
	240 VAC	
	24 VAC	
	48 VAC	
	24 VDC	GDM2A-G-Z5
	100 VAC	GDM2A-R-L1
	110 VAC	GDM2A-R-L1
	200 VAC	GDM2A-R-L2
With light	220 VAC	GDM2A-R-L2
	230 VAC	GDM2A-R-L2
	240 VAC	GDM2A-R-L2
	24 VAC	GDM2A-R-L5
	48 VAC	GDM2A-R-L5

VXD

VXZ

VX2 VXK

VXS VXB

VXE

VXP

VXR VXH

VXF

VX3

VXA

• Gasket Part No. for DIN Connector

VCW20-1-29-1 (For Class B) VCW20-1-29-1-F (For Class H)

 Lead Wire Assembly for Flat Terminal (Set of 2 pcs.)

VX021S-1-16FB

Bracket Assembly Part No. (for Metal Body)

^{* 2} mounting screws are shipped together with the bracket assembly.

# **Glossary of Terms**

#### **Pressure Terminology**

#### 1. Maximum operating pressure differential

The maximum pressure differential (the difference between the inlet and outlet pressure) which is allowed for operation. When the outlet pressure is 0 MPa, this becomes the maximum operating pressure.

#### 2. Minimum operating pressure differential

The minimum pressure differential (the difference between the inlet pressure and outlet pressure) required to keep the main valve fully opened.

#### 3. Maximum system pressure

The maximum pressure that can be applied inside the pipelines (line pressure).

[The pressure differential of the solenoid valve portion must be less than the maximum operating pressure differential.]

#### 4. Withstand pressure

The pressure in which the valve must be withstood without a drop in performance after holding for one minute under prescribed pressure and returning to the operating pressure range. [value under the prescribed conditions]

#### **Electrical Terminology**


#### 1. Surge voltage

A high voltage which is momentarily generated by shutting off the power in the shut-off area.

#### 2. Degree of protection

A degree defined in the "JIS C 0920: Waterproof test of electric machinery/appliance and the degree of protection against the intrusion of solid foreign objects."

Verify the degree of protection for each product.



#### ●First Characteristics:

Degrees of protection against solid foreign objects

	•							•		
0	Non-protec	ted								
1	Protected a	against	solid t	foreign	objects	of 50	mmø	and	greater	
2	Protected a	against:	solid t	foreign	objects	of 12	mmø	and	greater	
3	Protected a	against	solid f	foreign	objects	of 2.5	mmø	and	d greater	7
4	Protected a	against	solid t	foreign	objects	of 1.0	mmø	and	d greater	r -
5	Dust-prote	cted								
6	Dust-tight									

#### **Electrical Terminology**

## Second Characteristics: Degrees of protection against water

Degrees of protection against water				
0	Non-protected	_		
1	Protected against vertically falling water drops	Dripproof type 1		
2	Protected against vertically falling water drops when enclosure tilted up to $15^{\circ}$	Dripproof type 2		
3	Protected against rainfall when enclosure tilted up to 60°	Rainproof type		
4	Protected against splashing water	Splashproof type		
5	Protected against water jets	Water-jet-proof type		
6	Protected against powerful water jets	Powerful water-jet-proof type		
7	Protected against the effects of temporary immersion in water	Immersible type		
8	Protected against the effects of continuous immersion in water	Submersible type		

#### Example) IP65: Dust-tight, Water-jet-proof type

"Water-jet-proof type" means that no water intrudes inside an equipment that could hinder from operating normally by means of applying water for 3 minutes in the prescribed manner. Take appropriate protection measures, since a device is not usable in an environment where a droplet of water is splashed constantly.

#### Others

#### 1. Material

NBR: Nitrile rubber

FKM: Fluoro rubber

EPDM: Ethylene propylene rubber

#### 2. Oil-free treatment


The degreasing and washing of wetted parts

#### 3. Symbol

When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.

#### **Flat Terminal**

## Flat terminal/Electrical connection size of molded coil





## **Solenoid Valve Flow Rate Characteristics** (How to indicate flow rate characteristics)

1. Indication of flow rate characteristics

The flow rate characteristics in equipment such as a solenoid valve, etc. are indicated in their specifications as shown in Table (1).

Table (1) Indication of Flow Rate Characteristics

Corresponding equipment	Indication by international standard	Other indications	Conformed standard	
B	C, b	_	ISO 6358: 1989 JIS B 8390: 2000	
Pneumatic equipment	_	s	JIS B 8390: 2000 Equipment: JIS B 8379, 8381-1, 8381-2	
		Cv	ANSI/(NFPA)T3.21.3 R1-2008	
Process fluid control	Kv	_	IEC60534-1: 2005 IEC60534-2-3: 1997 JIS B 2005-1: 2012	
equipment	_	Cv	JIS B 2005-1: 2012 JIS B 2005-2-3: 2004 Equipment: JIS B 8471, 8472, 8473	

#### 2. Pneumatic equipment

2.1 Indication according to the international standards

(1) Conformed standard

ISO 6358: 1989 : Pneumatic fluid power—Components using compressible fluids—

Determination of flow rate characteristics

JIS B 8390: 2000 : Pneumatic fluid power—Components using compressible fluids—

How to test flow rate characteristics

(2) Definition of flow rate characteristics

The flow rate characteristics are indicated as a result of a comparison between sonic conductance C and critical pressure ratio b.

Sonic conductance C: Value which divides the passing mass flow rate of an equipment in a choked flow condition by the product of the upstream absolute pressure and the density in a standard condition.

Critical pressure ratio **b**: Pressure ratio (downstream pressure/upstream pressure) which will turn to a choked

flow when the value is smaller than this ratio.

Choked flow

: The flow in which the upstream pressure is higher than the downstream pressure and where sonic speed in a certain part of an equipment is reached.

Gaseous mass flow rate is in proportion to the upstream pressure and not dependent

on the downstream pressure.

Subsonic flow : Flow greater than the critical pressure ratio

Standard condition

: Air in a temperature state of 20°C, absolute pressure 0.1 MPa (= 100 kPa = 1 bar),

relative humidity 65%.

It is stipulated by adding the "(ANR)" after the unit depicting air volume.

(standard reference atmosphere)

Conformed standard: ISO 8778: 1990 Pneumatic fluid power—Standard reference atmosphere, JIS B 8393: 2000: Pneumatic fluid power—Standard reference atmosphere

(3) Formula for flow rate

It is described by the practical units as following.

When

$$\frac{\mathbf{\textit{P}}_{2} + 0.1}{\mathbf{\textit{P}}_{1} + 0.1} \le \mathbf{\textit{b}}, \text{ choked flow}$$

$$Q = 600 \times C (P_1 + 0.1) \sqrt{\frac{293}{273 + T}}$$
 .....(1)

When

$$\frac{P_{2}+0.1}{P_{1}+0.1} > b$$
, subsonic flow

$$\mathbf{Q} = 600 \times \mathbf{C} (\mathbf{P}_1 + 0.1) \sqrt{1 - \left[ \frac{\mathbf{P}_2 + 0.1}{\mathbf{P}_1 + 0.1} - \mathbf{b} \right]^2 \sqrt{\frac{293}{273 + \mathbf{T}}}}$$
 .....(2)

VX2

VXK VXD

VXZ

VXS VXB

VXE

VXP

VXR

VXH

VXF

VX3

VXA

Q: Air flow rate [L/min (ANR)]

C: Sonic conductance [dm3/(s-bar)], dm3 (Cubic decimeter) of SI = L (liter).

**b**: Critical pressure ratio [—]

P1: Upstream pressure [MPa]

P2: Downstream pressure [MPa]

T : Temperature [°C]

Note) Formula of subsonic flow is the elliptic analogous curve.

Flow rate characteristics are shown in Graph (1) For details, please use the calculation software available from SMC website.

#### Example


(4) Test method

Obtain the air flow rate for  $P_1 = 0.4$  [MPa],  $P_2 = 0.3$  [MPa], T = 20 [°C] when a solenoid valve is performed in C = 2 [dm³/(s·bar)] and D = 0.3.

According to formula 1, the maximum flow rate =  $600 \times 2 \times (0.4 + 0.1) \times \sqrt{\frac{293}{273 + 20}} = 600 \text{ [L/min (ANR)]}$ 

Pressure ratio = 
$$\frac{0.3 + 0.1}{0.4 + 0.1} = 0.8$$

Based on Graph (1), it is going to be 0.7 if it is read by the pressure ratio as 0.8 and the flow ratio to be  $\boldsymbol{b} = 0.3$ . Hence, flow rate = Max. flow x flow ratio =  $600 \times 0.7 = 420$  [L/min (ANR)]

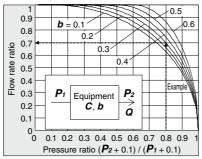

Graph (1) Flow rate characteristics

Attach a test equipment with the test circuit shown in Fig. (1) while maintaining the upstream pressure to a certain level which does not go below 0.3 MPa. Next, measure the maximum flow to be saturated in the first place, then measure this flow rate at 80%, 60%, 40%, 20% and the upstream and downstream pressure. And then, obtain the sonic conductance C from this maximum flow rate. In addition, calculate b using each data of others and the subsonic flow formula, and then obtain the critical pressure ratio b from that average.

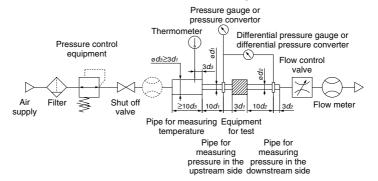


Fig. (1) Test circuit based on ISO 6358: 1989, JIS B 8390: 2000

#### 2.2 Effective area S

(1) Conformed standard

JIS B 8390: 2000: Pneumatic fluid power—Components using compressible fluids—

Determination of flow rate characteristics

Equipment standards: JIS B 8373: Solenoid valve for pneumatics

JIS B 8379: Silencer for pneumatics

JIS B 8381-1: Fittings for pneumatics—Part 1: Push-in fittings for thermoplastic resin tubing JIS B 8381-2: Fittings for pneumatics—Part 2: Compression fittings for thermoplastic resin tubing

(2) Definition of flow rate characteristics

Effective area S: The cross-sectional area having an ideal throttle without friction deduced from the calculation of the pressure changes inside an air tank or without reduced flow when discharging the compressed air in a choked flow, from an equipment attached to the air tank. This is the same concept representing the "easy to run through" as sonic conductance C.

(3) Formula for flow rate

When

$$\frac{P_{2} + 0.1}{P_{1} + 0.1}$$
 0.5, choked flow

$$Q = 120 \times S(P_1 + 0.1) \sqrt{\frac{293}{273 + T}}$$
 .....(3

When

$$\frac{P_{2} + 0.1}{P_{1} + 0.1} > 0.5$$
, subsonic flow

$$P_1 + 0.1$$

$$\mathbf{Q} = 240 \times \mathbf{S} \sqrt{(\mathbf{P}_2 + 0.1) (\mathbf{P}_1 - \mathbf{P}_2)} \sqrt{\frac{293}{273 + \mathbf{T}}}$$
 ....(4)

Conversion with sonic conductance C:

Q : Air flow rate[L/min(ANR)]

S : Effective area [mm²]

P1: Upstream pressure [MPa]

P2: Downstream pressure [MPa]

T: Temperature [°C]

Note) Formula for subsonic flow (4) is only applicable when the critical pressure ratio  $\boldsymbol{b}$  is the unknown equipment. In the formula (2) by the sonic conductance  $\boldsymbol{C}$ , it is the same formula as when  $\boldsymbol{b} = 0.5$ .

#### (4) Test method

Attach a test equipment with the test circuit shown in Fig. (2) in order to discharge air into the atmosphere until the pressure inside the air tank goes down to 0.25 MPa (0.2 MPa) from an air tank filled with the compressed air at a certain pressure level (0.5 MPa) which does not go below 0.6 MPa. At this time, measure the discharging time and the residual pressure inside the air tank which had been left until it turned to be the normal values to determine the effective area S, using the following formula. The volume of an air tank should be selected within the specified range by corresponding to the effective area of an equipment for test. In the case of JIS B 8379, the pressure values are in parentheses and the coefficient of the formula is 12.9.

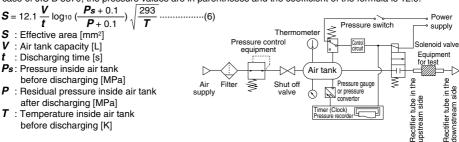


Fig. (2) Test circuit based on JIS B 8390: 2000

VX2

VXK VXD

VXZ

VXS

VXB VXE

VXP

VXR

VXH

VXF

VX3

VXA

#### 2.3 Flow coefficient CV factor

The United States Standard ANSI/(NFPA)T3.21.3: R1-2008R: Pneumatic fluid power—Flow rating test procedure and reporting method for fixed orifice components

This standard defines the *Cv* factor of the flow coefficient by the following formula that is based on the test conducted by the test circuit analogous to ISO 6358.

$$Cv = \frac{Q}{114.5\sqrt{\frac{\Delta P (P_2 + P_a)}{T_1}}}$$
(7)

 $\Delta P$ : Pressure drop between the static pressure tapping ports [bar]

**P**₁: Pressure of the upstream tapping port [bar gauge]

 $P_2$ : Pressure of the downstream tapping port [bar gauge]:  $P_2 = P_1 - \Delta P$ 

**Q**: Flow rate [L/s standard condition]

Pa: Atmospheric pressure [bar absolute]

T₁: Upstream absolute temperature [K]

Test conditions are  $< P_1 + P_2 = 6.5 \pm 0.2$  bar absolute,  $T_1 = 297 \pm 5$ K, 0.07 bar  $\le \Delta P$  0.14 bar.

This is the same concept as effective area **A** which ISO 6358 stipulates as being applicable only when the pressure drop is smaller than the upstream pressure and the compression of air does not become a problem.

#### 3. Process fluid control equipment

(1) Conformed standard

IEC60534-1: 2005: Industrial-process control valves. Part 1: control valve terminology and general considerations

IEC60534-2-3: 1997: Industrial-process control valves. Part 2: Flow capacity, Section Three-Test procedures

JIS B 2005-1: 2012: Industrial-process control valves – Part 1: Control valve terminology and general considerations JIS B 2005-2-3: 2004: Industrial-process control valves – Part 2: Flow capacity – Section 3: Test procedures Equipment standards: JIS B 8471: Solenoid valve for water

JIS B 8472: Solenoid valve for steam JIS B 8473: Solenoid valve for fuel oil

(2) Definition of flow rate characteristics

Kv factor: Value of the clean water flow rate represented by m³/h that runs through the valve (equipment for test) at 5 to 40°C, when the pressure difference is 1 x 105 Pa (1 bar). It is calculated using the following formula:

$$\mathbf{K}\mathbf{v} = \mathbf{Q}\sqrt{\frac{1\times10^5}{\Delta\mathbf{P}}\cdot\frac{\rho}{1000}}$$
....(8)

Kv: Flow coefficient [m3/h]

Q: Flow rate [m3/h]

△P: Pressure difference [Pa]

 $\rho$ : Density of fluid [kg/m³]

(3) Formula of flow rate

It is described by the practical units. Also, the flow rate characteristics are shown in Graph (2).

In the case of liquid:

$$Q = 53Kv\sqrt{\frac{\Delta P}{G}}$$
 (9)

**Q**: Flow rate [L/min]

Kv: Flow coefficient [m3/h]

ΔP: Pressure difference [MPa]

G: Relative density [water = 1]

In the case of saturated aqueous vapor:

$$Q = 232 Kv \sqrt{\Delta P(P_2 + 0.1)}$$
 .....(10)

Q: Flow rate [kg/h]

Kv: Flow coefficient [m3/h]

Δ**P**: Pressure difference [MPa]

 $P_1$ : Upstream pressure [MPa]:  $\Delta P = P_1 - P_2$ 

P2: Downstream pressure [MPa]

VX2

VXD

VXZ

VXS

**VXB** 

VXE

VXP

VXR

VXH

VXF

VX3

VXA

Conversion of flow coefficient:

Kv = 0.865 Cv .....(11)

Here.

CV factor: Value of the clean water flow rate represented by US gal/min that runs through the valve at 40 to VXK 100°F, when the pressure difference is 1 lbf/in² (psi)

Value is different from **Kv** and **Cv** factors for pneumatic purpose due to different test method.

#### (4) Test method

Connect the equipment for the test to the test circuit shown in Fig. (3), and run water at 5 to 40°C. Then, measure the flow rate with a pressure difference where vaporization does not occur in a turbulent flow (pressure difference of 0.035 MPa to 0.075 MPa when the inlet pressure is within 0.15 MPa to 0.6 MPa). However, as the turbulent flow is definitely caused, the pressure difference needs to be set with a large enough difference so that the Reynolds number does not fall below 1 x 105, and the inlet pressure needs to be set slightly higher to prevent vaporization of the liquid. Substitute the measurement results in formula (8) to calculate Kv.


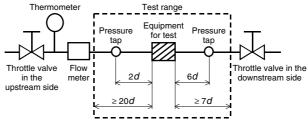


Fig. (3) Test circuit based on IEC60534-2-3, JIS B 2005-2-3

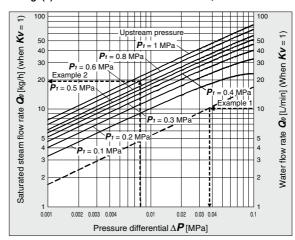

#### Graph (2) Flow rate characteristics

#### Example 1)

Obtain the pressure difference when water [15 L/min] runs through the solenoid valve with a  $Kv = 1.5 \text{ m}^3/\text{h}$ . As the flow rate when Kv = 1 is calculated as the formula:  $Q_0 = 15 \times 1/1.5 = 10$  [L/min], read off  $\Delta P$  when  $Q_0$  is 10 [L/min] in Graph (2). The reading is 0.036 [MPa].


#### Example 2)

Obtain the saturated steam flow rate when  $P_1 = 0.8$  [MPa] and  $\Delta P = 0.008$  [MPa] with a solenoid valve with a Kv = 0.05 [m³/h]. Read off  $Q_0$  when  $P_1$  is 0.8 and  $\Delta P$  is 0.008 in Graph (2), the reading is 20 kg/h. Therefore, the flow rate is calculated as the formula:  $\mathbf{Q} = 0.05/1 \times 20 = 1 \text{ [kg/h]}$ .

# **Flow Rate Characteristics**

Note) Use this graph as a guide. In the case of obtaining an accurate flow rate, refer to pages 203 through to 207.

## For Air

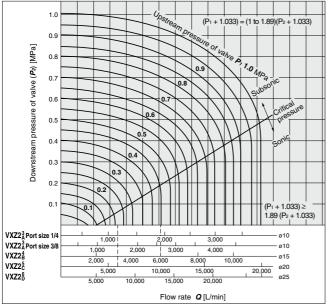


#### How to read the graph

The sonic range pressure to generate a flow of 6,000 L/min (ANR) is  $P_1 \approx 0.47$  MPa for a ø15 orifice (VXZ2 $\frac{4}{5}$ ) and  $P_1 \approx 0.23$  MPa for a ø20 orifice (VXZ2 $\frac{5}{5}$ ).

The optimum size for an upstream pressure  $P_1$  = 0.45 MPa and a flow of 6,000 L/min will be the VXZ2 $_6^4$  (ø15 orifice, port size 1/2).

#### For Water

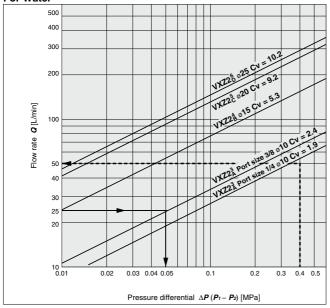

#### How to read the graph

The pressure differential for a ø10 orifice to supply a flow of 25 L/min (VXZ2 $^3_{A}$ , port size 3/8) will be  $\Delta P \approx 0.05$  MPa.

The optimum size for a pressure differential of  $\Delta P \approx 0.4$  MPa and a flow of 50 L/min will be the VXZ2 $_{\rm A}^3$  (ø10 orifice, port size 1/4).



Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 17 to 19 for 2 Port Solenoid Valve for Fluid Control Precautions.

#### Design

## **⚠** Warning

1. Cannot be used as an emergency shutoff valve etc.

The valves presented in this catalog are not designed for safety applications such as an emergency shutoff valve. If the valves are used in this type of system, other reliable safety assurance measures should also be adopted.

#### 2. Extended periods of continuous energization

The solenoid coil will generate heat when continuously energized. Avoid using in a tightly shut container. Install it in a well ventilated area. Furthermore, do not touch it while it is being energized or right after it is energized.

#### 3. Closed liquid circuit

In a closed circuit, when liquid is static, pressure could rise due to changes in temperature. This pressure rise could cause malfunction and damage to components such as valves. To prevent this, install a relief valve in the system.

#### 4. Actuator drive

When an actuator, such as a cylinder, is to be driven using a valve, take appropriate measures to prevent potential danger caused by actuator operation.

#### 5. Pressure (including vacuum) holding

It is not usable for an application such as holding the pressure (including vacuum) inside of a pressure vessel because air leakage is entailed in a valve.

- 6. When the conduit type is used as equivalent to an IP65 enclosure, install a wiring conduit etc.
- When an impact, such as water hammer etc., caused by the rapid pressure fluctuation is applied, the solenoid valve may be damaged. Give an attention to it.

#### Selection

## **⚠Warning**

#### 1. Usage with low flow

Unstable flow may occur with the product under the following conditions: • low flow from the pump or compressor, etc. • use of several elbows or tees in the circuit, or • thin nozzles installed at the end of the piping etc. This can cause valve opening/closing failure, or oscillation, and cause a valve malfunction.

Please check the pressure differential and flow to select the appropriate size of the valve referring to the Flow rate Characteristics on page 208. Ensure that pressure differential does not become lower than 0.01 MPa during ON (N.C.: Valve open).

#### Selection

VX2

VXK

מצע

VXZ

VXS

VXB

VXE

VXP

VXR

VXH

VXF

VXA

## **⚠** Warning

#### 2. Fluid

#### 1) Type of fluid

Select an appropriate valve with reference to the table below for the general fluid. Before using a fluid, check whether it is compatible with the materials of each model by referring to the fluids listed in this catalog. Use a fluid with a kinematic viscosity of 50 mm²/s or less.

#### Applicable Fluid

For Air	Air
For Water	Air, Water
For Oil	Air, Water, Oil
For Heated water	Air(up to 99°C), Water, Heated water
For High temperature oil	Air(up to 99°C), Water, Oil, High temperature oil
For High temperature on	All (up to 33 C), water, Oil, high temperature oil

#### 2) Flammable oil, Gas

Do not use the product with combustion-supporting or flammable fluids.

#### 3) Corrosive gas

Cannot be used since it will lead to cracks by stress corrosion or result in other incidents.

- 4) When a brass body is used, then depending on water quality, corrosion and internal leakage may occur. If such abnormalities occur, exchange the product for a stainless steel body.
- 5) Use an oil-free specification when any oily particle must not enter the passage.
- 6) Applicable fluid on the list may not be used depending on the operating condition. Give adequate confirmation, and then determine a model, just because the compatibility list shows the general case.

#### 3. Air quality

#### <Air>

#### 1) Use clean air.

Do not use compressed air that contains chemicals, synthetic oils including organic solvents, salt or corrosive gases, etc., as it can cause damage or malfunction.

#### 2) Install an air filter.

Install air filters close to valves at their upstream side. filtration degree of 5 µm or less should be selected.

#### 3) Install an aftercooler or air dryer, etc.

Compressed air that contains excessive drainage may cause malfunction of valves and other pneumatic equipment. To prevent this, install an aftercooler or air dryer, etc.

 If excessive carbon powder is generated, eliminate it by installing mist separators at the upstream side of valves.

If excessive carbon powder is generated by the compressor, it may adhere to the inside of the valves and cause a malfunction.

Refer to Best Pneumatics No.5 for further details on compressed air quality.



# Ŵ

# VXZ Series Specific Product Precautions 2

Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 17 to 19 for 2 Port Solenoid Valve for Fluid Control Precautions.

#### Selection

## **.**⚠Warning

#### <Water>

The use of a fluid that contains foreign objects can cause problems such as malfunction and seal failure by promoting wear of the valve seat and armature, and by sticking to the sliding parts of the armature etc. Install a suitable filter (strainer) immediately upstream from the valve. As a general rule, use 100 mesh.

The supply water includes materials that create a hard sediment or sludge such as calcium and magnesium. Since this scale and sludge can cause the valve to malfunction, install water softening equipment, and a filter (strainer) directly upstream from the valve to remove these substances.

#### Tap water pressure:

The water pressure for tap water is normally 0.4 MPa or less. However, in places like a high-rise building, the pressure may be 1.0 MPa. When selecting tap water, be careful of the maximum operating pressure differential.

When using water or heated water, poor operation or leaks may be caused by dezincification, erosion, corrosion, etc.

The brass (C37) body of this product uses dezincification resistant material as a standard. We also offer a stainless steel body type with improved corrosion resistance. Please use the one that fits your needs.


#### <0il>

Generally, FKM is used as seal material, as it is resistant to oil. The resistance of the seal material may deteriorate depending on the type of oil, manufacturer or additives.

Check the resistance before using.

#### <Vacuum>

Please be aware that there is a range of pressure that can be used.

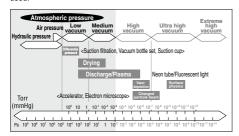

Vacuum piping direction: if the system uses a vacuum pump, we ask that you install the vacuum pump on the secondary side.

Also, install a filter on the primary side, and be careful that no foreign object is picked up.

Please replace the valve after operating the device approximately 300,000 times.

## **⚠Warning**

#### 4. Ambient environment

Use within the operable ambient temperature range. Check the compatibility between the product's composition materials and the ambient atmosphere. Be certain that the fluid used does not touch the external surface of the product.


#### 5. Countermeasures against static electricity

Take measures to prevent static electricity since some fluids can cause static electricity.

## **⚠** Caution

#### 1. Leakage voltage

When the solenoid valve is operated using the controller, etc., the leakage voltage should be the product allowable leakage voltage or less. Particularly when using a resistor in parallel with a switching element and using a C-R element (surge voltage suppressor) to protect the switching element, take note that leakage current will flow through the resistor, C-R element, etc., creating a possible danger that the valve may not turn off.



AC coil: 5% or less of rated voltage DC coil: 2% or less of rated voltage

#### 2. Selecting model

Material depends on fluid. Select optimal models for the fluid.

#### 3. When the fluid is oil.

The kinematic viscosity must not exceed 50 mm²/s.

#### Mounting

## 

 If air leakage increases or equipment does not operate properly, stop operation.

After mounting is completed, confirm that it has been done correctly by performing a suitable function test.

#### 2. Do not apply external force to the coil section.

When tightening is performed, apply a wrench or other tool to the outside of the piping connection parts.

#### Mount a valve with its coil position upward, not downward.

When mounting a valve with its coil positioned downward, foreign objects in the fluid will adhere to the iron core leading to a malfunction

## 4. Do not warm the coil assembly with a heat insulator etc. Use tape, heaters, etc., for freeze prevention on the piping and

5. Secure with brackets, except in the case of steel

body only. They can cause the coil to burn out.

piping and copper fittings.





Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 17 to 19 for 2 Port Solenoid Valve for Fluid Control Precautions.

#### Mounting

## **⚠** Warning

Avoid sources of vibration, or adjust the arm from the body to the minimum length so that resonance will not occur.

#### 7. Painting and coating

Warnings or specifications printed or labeled on the product should not be erased, removed or covered up.

#### Disassembly/Assembly Procedures

## **∧** Caution

 Before starting the disassembly work, be sure to shut off the power supply and pressure supply, and then release the residual pressure.

#### Disassembly

#### <N.C.>

1) Loosen the mounting screws.

The coil assembly, stopper, return spring and body assembly can be removed

#### <N.O.>

1) Loosen the mounting screws.


The coil assembly, O-rings, adapter and body assembly can be removed.

#### Assembly

#### <Common to N.C. and N.O.>

- Mount the components on the body in the reverse order of disassembly.
- When changing the electrical entry direction, turn the coil assembly in a desired direction to mount it.
- 3) Push the coil assembly against the body and tighten the screws two or more rounds diagonally (Fig. 2) in the status that there are no gaps between the coil assembly and body (Fig. 1). Proper tightening torque: 0.7 N·m

Tighten the screws in the order of "1  $\rightarrow$  2  $\rightarrow$  3  $\rightarrow$  4  $\rightarrow$  1  $\rightarrow$  2  $\rightarrow$  3  $\rightarrow$  4"

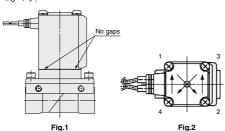

- After tightening the screws, make sure that there are no gaps between the coil and body (Fig. 1).
- After the disassembly and assembly have been completed, make sure that no leak occurs from the seal. Additionally, when restarting the valve, make sure that the valve operates correctly after checking the safety.

# <N.C.> <N.O.> Mounting screw Mounting screw Coil assembly Coil assembly Stopper O-ring A Return spring O-ring B Body assembly Adapter O-ring C Body assembly

Disassembly/Assembly Procedures

VX2

VXK

מצע

VXZ

VXS

VXB

VXE

VXP

VXR

VXH

VXF

VX3

VXA





Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 17 to 19 for 2 Port Solenoid Valve for Fluid Control Precautions.

ø12

#### **Piping**

## **⚠** Warning

1. During use, deterioration of the tube or damage to the fittings could cause tubes to come loose from their fittings and thrash about.

To prevent uncontrolled tube movement, install protective covers or fasten tubes securely in place.

2. For piping the tube, fix the product securely using the mounting holes so that the product is not in the air.

## **∕**!∖ Caution

#### 1. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe. Avoid pulling, compressing, or bending the valve body when piping.

- 2. Avoid connecting ground lines to piping, as this may cause electric corrosion of the system.
- 3. Always tighten threads with the proper tightening torque. When attaching fittings to valves, tighten with the proper tightening torque shown below.

Lower tightening torque will lead into fluid leakage.

#### **Tightening Torque for Piping**

Connection threads	Proper tightening torque N·m
Rc1/8	7 to 9
Rc1/4	12 to 14
Rc3/8	22 to 24
Rc1/2	28 to 32
Rc3/4	20 10 32
Rc1	36 to 38

#### 4. Connection of piping to products

When connecting piping to a product, avoid mistakes regarding the supply port etc.

#### 5. Winding of sealant tape

When connecting pipes, fittings, etc., be sure that chips from the pipe threads and sealing material do not enter the valve

Furthermore, when sealant tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.




- 6. If a regulator and valve are connected directly, they may vibrate together and cause chattering. Do not connect directly.
- 7. If the cross-sectional area of piping for the fluid supply side is restricted, operation will become unstable due to inadequate pressure differential during valve operation. Use piping size for the fluid supply side that is suited to the port size.

#### **Recommended Piping Conditions**

1. When connecting tubes using One-touch fittings, provide some spare tube length shown in Fig. 1, recommended piping configuration.

Also, do not apply external force to the fittings when binding tubes with bands etc. (see Fig. 2.)



rig. I Recommended piping configuration						
				Unit: mm		
Tubing	Mounting pitch A			Straight portion		
size	Nylon tubing	Soft nylon tubing	Polyurethane tubing	length		
ø1/8"	44 or more	29 or more	25 or more	16 or more		
ø6	84 or more	39 or more	39 or more	30 or more		
ø1/4"	89 or more	56 or more	57 or more	32 or more		
ø8	112 or more	58 or more	52 or more	40 or more		
ø10	140 or more	70 or more	69 or more	50 or more		

82 or more




Fig. 2 Binding tubes with bands





Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 17 to 19 for 2 Port Solenoid Valve for Fluid Control Precautions.

#### Wiring

## **⚠** Warning

 The solenoid valve is an electrical product. For safety, install an appropriate fuse and circuit breaker before use.

When using multiple solenoid valves, it is not sufficient to merely install one fuse on the inlet side. In order to ensure the safety of the devices, select and install a fuse for each circuit.

Do not apply AC voltage to Class "H" coil AC type unless it is built in full-wave rectifier, or the coil will be damaged.

## 

- As a rule, use electrical wire with a cross sectional area of 0.5 to 1.25 mm² for wiring.
   Furthermore, do not allow excessive force to be applied to the lines.
- 2. Use electrical circuits which do not generate chattering in their contacts.
- 3. Use voltage which is within  $\pm 10\%$  of the rated voltage. In cases with a DC power supply where importance is placed on responsiveness, stay within  $\pm 5\%$  of the rated value. The voltage drop is the value in the lead wire section connecting the coil.
- 4. When a surge from the solenoid affects the electrical circuitry, install a surge voltage suppressor etc., in parallel with the solenoid. Or, adopt an option that comes with the surge voltage protection circuit. (However, a surge voltage occurs even if the surge voltage protection circuit is used.)

#### **Operating Environment**

## **⚠** Warning

- Do not use in an atmosphere having corrosive gases, chemicals, sea water, water, water steam, or where there is direct contact with any of these.
- 2. Do not use in explosive atmospheres.
- 3. Do not use in locations subject to vibration or impact.
- Do not use in locations where radiated heat will be received from nearby heat sources.
- Employ suitable protective measures in locations where there is contact with water droplets, oil or welding spatter, etc.

#### Maintenance

## **∧**Warning

#### 1. Removing the product

The valve will reach a high temperature when used with high temperature fluids. Confirm that the valve temperature has dropped sufficiently before performing work. If touched inadvertently, there is a danger of being burned.

- Shut off the fluid supply and release the fluid pressure in the system.
- 2) Shut off the power supply.
- 3) Dismount the product.

#### 2. Low frequency operation

Switch valves at least once every 30 days to prevent malfunction. Also, in order to use it under the optimum state, conduct a regular inspection once a half year.

### **⚠** Caution

#### 1. Filters and strainers

- 1) Be careful regarding clogging of filters and strainers.
- Replace filter elements after one year of use, or earlier if the pressure drop reaches 0.1 MPa.
- 3) Clean strainers when the pressure drop reaches 0.1 MPa.

#### 2. Lubrication

When using after lubricating, never forget to lubricate continuously.

#### 3. Storage

In case of long term storage after use, thoroughly remove all moisture to prevent rust and deterioration of rubber materials etc.

4. Exhaust the drain from an air filter periodically.

#### Operating Precautions

## **⚠** Warning

- If there is a possibility of reverse pressure being applied to the valve, take countermeasures such as mounting a check valve on the downstream side of the valve.
- When problems are caused by a water hammer, install water hammer relief equipment (accumulator etc.), or use an SMC water hammer relief valve (VXR series).
- 3. For pilot type 2-port solenoid valves, when the valve is closed, sudden pressure resulting from the startup of the fluid supply source (pump, compressor, etc.) may cause the valve momentarily to open and leakage to occur, so please exercise caution.
- 4. If the product is used in the conditions in which rapid decrease in the inlet pressure of the valve and rapid increase in the outlet pressure of the valve are repeated, excessive stress will be applied to the diaphragm, which causes the diaphragm to be damaged and dropped, leading to the operation failure of the valve. Check the operating conditions before use.




Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 17 to 19 for 2 Port Solenoid Valve for Fluid Control Precautions.

#### **Electrical Connections**

## **⚠** Caution

#### ■ Grommet

Class B coil: AWG20 Insulator O.D. 2.6 mm Class H coil: AWG18 Insulator O.D. 2.1 mm



	Rated voltage	Lead wire color		
		1	2	
	DC	Black	Red	
	100 VAC	Blue	Blue	
	200 VAC	Red	Red	
	Other AC	Gray	Gray	

* There is no polarity

## ■ DIN terminal Disassembly

- After loosening the binding head screw with flange, then if the housing is pulled in the direction of the arrow, the connector will be removed from the solenoid valve.
- 2. Pull out the binding head screw with flange from the housing.
- There is a cutout on the bottom of the terminal block. Insert a small flat head screwdriver, etc. into this cutout, and remove the terminal block from the housing. (See figure below.)
- 4. Remove the ground nut, and pull out the washer and the rubber seal.

  Wiring
- Pass the cable through the ground nut, washer and rubber seal in this order, and insert these parts into the housing.
- 2. Loosen the binding head screw of the terminal block, then insert the core wire or the crimped terminal of the lead wire into the terminal, and securely fix it with the binding head screw. The binding head screw of the terminal block is M3.


Note 1) Tighten the screw to a torque of between 0.5 and 0.6 N·m. Note 2) Cable O.D.: Ø6 to Ø12 mm

Note 3) For an outside cable diameter of ø9 to 12 mm, remove the internal parts of the rubber seal before using.

#### Assembly

- Pass the cable through the ground nut, washer, rubber seal and the housing in this order, and connect to the terminal block. Then, set the terminal block inside the housing. (Push in the terminal block until it snaps into position.)
- Insert the rubber seal and the washer in this order into the cable entry of the housing, and then tighten the ground nut securely.
- 3. Insert the gasket between the bottom part of the terminal block and the plug attached to the equipment, and then insert the binding head screw with flange from the top of the housing, and tighten it. Note 1) Tighten the screw to a torque of between 0.5 and 0.6 N·m.

Note 2) The orientation of the connector can be changed in steps of 90° by changing the method of assembling the housing and the terminal block.

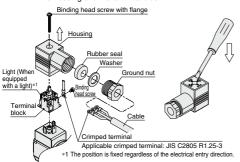

## **⚠** Caution

Internal connections are as shown below.

Make connections to the power supply accordingly.



Terminal no.	1	2	
DIN terminal	+ (-)	- (+)	

* There is no polarity

#### DIN (EN175301-803) Terminal

This DIN terminal corresponds to the Form A DIN connector with an 18 mm terminal pitch, which complies with EN175301-803B.



#### ■ Conduit terminal

#### Disassembly

 Loosen the mounting screw, and remove the terminal cover from the conduit terminal.

#### Wiring

**∂SWC** 

- 1. Insert the cable into the conduit terminal.
- Loosen the screw with UP terminal of the conduit terminal, then insert the core wire or the crimped terminal of the lead wire into the terminal, and securely fix it with the screw with UP terminal. Note 1) Tighten the screw to a torque of between 0.5 and 0.6 N·m.

VX2

VXK

VXD VXZ

VXS

VXB

VXE

VXP

VXR

VXF

VX3



Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 17 to 19 for 2 Port Solenoid Valve for Fluid Control Precautions.

#### **Electrical Connections**

## **∧** Caution

#### ■ Conduit terminal


#### Assembly

 Insert the gasket into the conduit terminal, and then clamp the terminal cover with the mounting screw.

Note 1) Tighten the screw to a torque of between 0.5 and 0.6 N·m. Note 2) When changing the orientation of the conduit terminal, carry out the following procedure.


- Apply a tool (monkey wrench, spanner, etc.) to the width across flats of the conduit terminal, and turn the terminal in the counterclockwise direction.
- 2. Loosen the lock nut
- Turn the conduit terminal in the clamping direction (clockwise direction) to about 15° ahead of the desired position.
- Turn the lock nut by hand to the coil side until it is lightly tightened.
- 5. Apply a tool to the width across flats of the conduit terminal, and turn it to the desired position (through an angle of about 15°) so as to clamp the conduit terminal.

Note) When changing the orientation by applying additional tightening force to the conduit terminal from the factory-set position, turn no more than one half a turn.

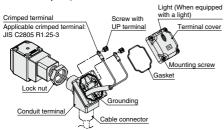

Make connections according to the marks shown below.

- $\cdot$  Use the tightening torques below for each section.
- Properly seal the terminal connection (G1/2) with the special wiring conduit etc.

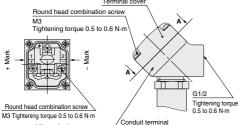

#### View A-A

(Internal connection diagram)

#### ■ Conduit


When used as an IP65 equivalent, use seal to install the wiring conduit. Also, use the tightening torque below for the conduit.

Class B coil: AWG20 Insulator O.D. 2.5 mm

Class H coil: AWG18 Insulator O.D. 2.1 mm

#### **Electrical Connections**

## **∧** Caution



Rated voltage	Lead wire color			
hateu voitage	1	2		
DC	Black	Red		
100 VAC	Blue	Blue		
200 VAC	Red	Red		
Other AC	Gray	Gray		

* There is no polarity.

Description	Part no.		
Seal	VCW20-15-6		

Note) Please order separately.


#### **Electrical Circuits**

## 

## [DC circuit] Grommet. Flat terminal


# 

Grommet, DIN terminal, Conduit terminal, Conduit



With surge voltage suppressor

## Without electrical option DIN terminal, Conduit terminal



With light/surge voltage suppressor

#### [AC circuit]

Grommet, DIN terminal, Conduit terminal, Conduit



Without electrical option

Varistor
Rectifier
element

DIN terminal, Conduit terminal

With light/surge voltage suppressor

#### One-touch Fitting

## **⚠** Caution

For information on handling One-touch fittings and on appropriate tubing, refer to page 211 and the Fittings & Tubing section of the "Handling Precautions for SMC Products" on the SMC website.